



5685

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1		803716A 2	RECOIL STARTER ASSEMBLY	1		
2		803716 2	STARTER HOUSING	1		
3	24	812645T	SPRING SET, Starter	1		
4		812633	STARTER SHEEVE	1		
5	24	812634	RETURN SPRING	2		
6		812635	RATCHET	2		
7	24	812636	FRICTION SPRING	1		
8	10	812637	BOLT	1		
9		812638	FRICTION PLATE	1		
10	50	12066A 9	ROPE	1		
11		812640	STARTER HANDLE	1		
12	25	812641	RETAINER	1		
13		16110 1	SEAL PLATE	1		
14		812642	STARTER PULLEY	1		
15	10	16828 1	SCREW, (with Lockwasher)	3		
16		17634	STARTER LOCK	1		
17	10	855544 9	SCREW	1		
18	23	17637	COLLAR	1		
19	24	17638	SPRING	1		
20		803721 1	CAM	1		
21	13	17641	WAVE WASHER	1		
22	10	855544	SCREW	1		
23		804891	ROD SNAP	2		
24		803681 5	STARTER LOCK ROD	1		
25	10	16705	BOLT	3		
26	13	40025 6	LOCKWASHER, (M6)	3		
27		804900 1	STARTER BRACKET	1	(Port)	
28		804900 2	STARTER BRACKET	1	(Starboard)	
29	10	16828 2	BOLT	4		
30	54	813275	CLAMP	1		
31	23	855545	COLLAR	1		