



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	2160	7264A10	TOP COWL ASSEMBLY	1	
2		65489 3	SEAL, TOP COWL (16-1/2")	5	
3		66942	BLANKET, TOP COWL - TOP EA	1	
4		85544	BLANKET, TOP COWL - SIDE E	2	
5		69522	BLANKET, TOP COWL - FRONT	1	
6	25	39086	GROMMET, COWL LATCH - TOP	1	
7		71502	COVER, FRONT	2	
8	11	65517	NUT, SPEED - FRONT COVER TC	4	
9		69346	BUMPER, COWL - REAR	2	
10	17	72856	PIN, TOP COWL CATCH	1	
11	12	98500	WASHER, TOP COWL CATCH (LC	1	
12	24	79351	SPRING, COMPRESSION - COWL	1	
13	12	65567	WASHER, TOP COWL CATCH (UF	1	
14	11	20184	NUT, COWL CATCH TO TOP COV	1	
15		91871A 1	STARTER HOUSING ASSEMBLY	1	
16		77859A 1	ROPE GUIDE (ALUMINUM)	1	
17		77860	RING, RETAINING - ROPE GU	1	
16		58657	ROPE GUIDE (PLASTIC)	1	
17	53	72168	RING, RETAINING - ROPE GUIC	1	
18		65499 1	SEAL, STARTER HOUSING TO TI	1	
18	10	72862	SCREW, STARTER HOUSING TO	1	
20		93695	PULLEY, STARTER CABLE	1	
21	10	28789	SCREW, CABLE PULLERY (3/4")	1	
22	12	22887	WASHER, CABLE PULLEY SCREW	1	
23	23	30977	SPACER, CABLE PULLEY	1	
24	14	20165	TAB WASHER, SHEAVE SHAFT	1	
25	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1	
26		20155	RETAINER, STARTER SPRING	1	
27	24	29340A 1	SPRING, STARTER REWIND	1	
28	23	28912	BUSHING, STARTER SPRING GL	1	
29	50	93696A 2	STARTER SHEAVE ASSEMBLY	1	
30	17	22896	PIN, RETAINER - STARTER CAI	1	
31		74359	SHAFT, INTERLOCK	1	
32		74353	LEVER, LOCK	1	
33		74351	LEVER, FOLLOWER	1	
34	17	38489	ROLL PIN, INTERLOCK SHAFT	2	
35	23	26856	BUSHING, NYLON - INTERLOCK	2	
36	24	74347	SPRING, TORSION - INTERLOCK	1	
37	13	36206	WASHER, WAVE - STARTER PAW	3	
38		30596	PAWL, STARTER	3	
39	22	28912	BUSHING, NYLON, SHEAVE SHA	1	