



GEAR HOUSING (DRIVE SHAFT)

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
	1630	7360A12	GEAR HOUSING ASSEMBLY (SHI	1	UNITED STATES 5306000 AND I	
	1630	7360A13	GEAR HOUSING ASSEMBLY (LOP	1	UNITED STATES 5306000 AND I	
	1630	7360A29	GEAR HOUSING ASSEMBLY (SHI	1	UNITED STATES 5306001 AND I	
	1630	7360A30	GEAR HOUSING ASSEMBLY (LOP	1	UNITED STATES 5306001 AND I	
1	1630	7360A11	GEAR HOUSING ASSEMBLY	1		
2	16	58138	STUD, GEAR HOUSING (3-7/1	1		
3	16	58136	STUD, WATER PUMP (2-3/4"	2		
4	31	22756	ROLLER BEARING	1		
5	17	20032	DOWEL PIN	1		
6	26	33613	SEAL, RUBBER	1		3
7	23	86215	BEARING, NYLON	1		
8	35	33425	SCREEN, INTAKE	1		
9	10	28642	SCREW, INTAKE SCREEN	1		
10	43	98696	PINION GEAR	1		
11	14	30377	TAB WASHER, PINION GEAR S	1		
12	10	30376	SCREW, PINION GEAR TO DR	1		
13	45	75034	DRIVE SHAFT (SHORT) USE W	1	UNITED STATES 5306000 AND I	
13	45	75033	DRIVE SHAFT (LONG) USE WIT	1	UNITED STATES 5306000 AND I	
13	45	95873A 1	DRIVE SHAFT (SHORT) USE W	1	UNITED STATES 5306001 AND I	
13	45	95874A 1	DRIVE SHAFT (LONG) USE WIT	1	UNITED STATES 5306001 AND I	
14	15	30527A 1	SHIM ASSEMBLY, BALL BEARIP	AR		4
15	30	70944	BALL BEARING, DRIVE SHAFT	1		
16	53	30523	RETAINING RING, BALL BEARII	1		
17	15	30527A 1	SHIM ASSEMBLY, BALL BEARIP	AR		4
18	46	70941A 1	WATER PUMP HSG. (USE WITI	1		
18	46	92970A 1	WATER PUMP HSG. (USE WITI	1		
19	25	29439	"O" RING	1		3
20	26	30900	OIL SEAL (USE WITH 47-8998	1		
20	26	96063	OIL SEAL (USE WITH 47-8998	1		
21		70977	INSERT	1		
22	26	33613	SEAL, WATER INTAKE TUBE	1		3
23	232	34293	TUBE, WATER INTAKE	1		
24	28	56655	KEY, IMPELLER DRIVE	1		
25	47	89981	IMPELLER (MOLDED 47-89981	1		
25	47	89980	IMPELLER (MOLDED 47-89980	1		
26		46895	FACE PLATE, WATER PUMP	1		
27		93224A 1	WATER PUMP COVER ASSEME	1		
28	26	36558	SEAL, WATER PUMP COVER	1		3
29	23	86214	BEARING, NYLON - WATER F	1		
30	26	30913	OIL SEAL, WATER PUMP COV	1		
31	12	20522	WASHER, WATER PUMP STU	2		