



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2160	7264A10	TOP COWL ASSEMBLY	1		
2		65489 3	SEAL, TOP COWL (16-1/2")	5		
3		66942	BLANKET, TOP COWL - TOP EA	1		
4		85544	BLANKET, TOP COWL - SIDE E	2		
5		69522	BLANKET, TOP COWL - FRONT	1		
6	25	39086	GROMMET, COWL LATCH - TOP	1		
7		71502	COVER, FRONT	2		
8	11	65517	NUT, SPEED - FRONT COVER TC	4		
9		69346	BUMPER, COWL - REAR	2		
10	17	72856	PIN, TOP COWL CATCH	1		
11	12	98500	WASHER, TOP COWL CATCH (LC	1		
12	24	79351	SPRING, COMPRESSION - COWL	1		
13	12	65567	WASHER, TOP COWL CATCH (UF	1		
14	11	20184	NUT, COWL CATCH TO TOP COV	1		
15		91871A 1	STARTER HOUSING ASSEMBLY	1		
16		77859A 1	ROPE GUIDE (ALUMINUM)	1		
17		77860	RING, RETAINING - ROPE GU	1		
16		58657	ROPE GUIDE (PLASTIC)	1		
17	53	72168	RING, RETAINING - ROPE GUIC	1		
18		65499 1	SEAL, STARTER HOUSING TO TI	1		
18	10	72862	SCREW, STARTER HOUSING TO	1		
20		93695	PULLEY, STARTER CABLE	1		
21	10	28789	SCREW, CABLE PULLERY (3/4")	1		
22	12	22887	WASHER, CABLE PULLEY SCREW	1		
23	23	30977	SPACER, CABLE PULLEY	1		
24	14	20165	TAB WASHER, SHEAVE SHAFT	1		
25	11	20166	NUT, SHEAVE SHAFT (LEFT HAN	1		
26		20155	RETAINER, STARTER SPRING	1		
27	24	29340A 1	SPRING, STARTER REWIND	1		
28	23	28912	BUSHING, STARTER SPRING GL	1		
29	50	93696A 2	STARTER SHEAVE ASSEMBLY	1		
30	17	22896	PIN, RETAINER - STARTER CAI	1		
31		74359	SHAFT, INTERLOCK	1		
32		74353	LEVER, LOCK	1		
33		74351	LEVER, FOLLOWER	1		
34	17	38489	ROLL PIN, INTERLOCK SHAFT	2		
35	23	26856	BUSHING, NYLON - INTERLOCK	2		
36	24	74347	SPRING, TORSION - INTERLOCK	1		
37	13	36206	WASHER, WAVE - STARTER PAW	3		
38		30596	PAWL, STARTER	3		
39	22	28912	BUSHING, NYLON, SHEAVE SHA	1		