



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42207A 1	HOUSING ASSEMBLY, STARTER	1		
2		42690	BUSHING, STARTER ROPE	1		
3	53	42689	RETAINING RING	1		
4		42194A 2	RECOIL SPRING ASSEMBLY	1		
6		42171	LEVER, LOCK (UPPER)	1		
7	12	56681	WASHER, UPPER LOCK LEVER	1		
8		42173	LEVER, LOCK (LOWER)	1		
9	10	48408	SCREW, LOWER LOCK LEVER	1		
10	23	43787	SPACER, STARTER HOUSING SC	3		
11	10	40011128	SCREW, STARTER HOUSING AT	3		
12		42094	REST	1	(ROPE BUSHING IS SEPARATE)	
13		44180	BUSHING, STARTER ROPE	1	(ROPE BUSHING IS SEPARATE)	
14	12	40023 13	WASHER, REST SCREW	2	(ROPE BUSHING IS SEPARATE)	
12		19018	REST	1	(ROPE BUSHING IS MOLDED)	
15		12674	SUPPORT	1		
16	10	40019111	SCREW, REST TO STARTER HO	2		
17	23	30977 2	SPACER, REST SCREW	4		
18	11	40063 3	NUT, REST SCREW	2		
19		42034A 1	SHEAVE, STARTER	1		
20	19	42707 1	CAP, STARTER SHEAVE	1		
20	19	817362	CAP, STARTER SHEAVE (CAP F	1		
21		42209	TAB, STARTER SHEAVE	3		
22	10	48408	SCREW, TAB	3		
23	50	12066A 9	ROPE, STARTER	1		
24		85174A 1	HANDLE ASSEMBLY, STARTER F	1		