



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		86617A13	STATOR ASSEMBLY	1		
2	10	40001 20	SCREW (M5 X .8 X 25)	2		
3	10	40001 8	SCREW (M5 X .8 X 12)(MANUAL)	1		
4		98450A 5	TRIGGER ASSEMBLY	1		
5		11100	CLIP, TRIGGER LEAD	1		
6	339	7452A15	SWITCH BOX	1		
7	10	40019108	SCREW, SWITCH BOX TO CYLIN	2		
8	10	48408	SCREW, GROUND WIRE	1		
9	339	7370A13	IGNITION COIL ASSEMBLY	2		
10	10	40112	SCREW, IGNITION COIL	2		
11		88173	TAB WASHER	2		
12	23	88171	BUSHING, COIL	2		
13	11	45076	NUT, COIL TERMINAL	4		
14	84	813715A 2	LEAD ASSEMBLY, HIGH TENSIO	1		
15	85	63709A 1	BOOT ASSEMBLY, SPARK PLUG	2		
16	33	12343	SPARK PLUG (NGK #BP8HS-10)	2		
16	33	816737 2	SPARK PLUG (NGK#BP8H-N-10)	2		
16	33	14814548	SPARK PLUG (NGK#BPZ8HS-10)	2		
16	33	816837 2	SPARK PLUG(NGK#BPZ-8H-N-10)	2		
16	33	19424	SPARK PLUG(NGK#BP8HS-15)	1		
16	33	14814568	SPARK PLUG(NGK#BPZ8HS-15)	2		
17		69355	STA-STRAP	1		