



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		42207	1 STARTER HOUSING	1		
2		42690	BUSHING	1		
3	53	818853	RETAINING RING	1		
4		19018	REST	1		
5		12674	SUPPORT	1		
6	10	40019111	SCREW, REST TO STARTER HO	2		
7	23	30977	2 SPACER, REST SCREW	4		
8	11	40063	3 NUT, REST SCREW	2		
9		42171	LEVER, LOCK (UPPER)	1		
10	12	56681	WASHER, UPPER LOCK LEVER	1		
11		42173	LEVER, LOCK (LOWER)	1		
12	10	48408	SCREW, LOWER LOCK LEVER	1		
13	10	40011128	SCREW, STARTER HOUSING AT	3		
14	23	43787	SPACER, STARTER HOUSING SC	3		
15	24	86857	SPRING	1		
16		42034	3 STARTER PULLEY	1		
17	50	12066A	9 ROPE, STARTER	1		
18		85174A	1 HANDLE ASSEMBLY	1		
19	24	86851	SPRING	2		
20		86850	CAM	2		
21	53	86849	RETAINING RING	2		
22	24	86852	SPRING	1		
23		86853	CAM	1		
24	10	818838	SCREW	1		
25		90478	FELT PAD	1		