



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		95815	COVER (TOP)	1		
2		95828	COVER (BOTTOM)	1		
3	87	95810A 1	START SWITCH	1		
4		55741	BOOT ASSEMBLY	1		
5	87	88890A 2	SWITCH ASSEMBLY	1		
6	84	79139A20	WIRE ASSEMBLY (RED)	1		
10		95814	STRAP	1		
11		95813	FASTENER	1		
12	10	40056108	SCREW	1		
13	10	40057 27	SCREW	2		
14	12	45771	WASHER	2		
15	10	62568	SCREW	1		
16	10	69570	SCREW	1		
17		816770	RECTIFIER ASSEMBLY	1		
18	10	48409	SCREW	2		
19	11	45076	NUT	3		
20	89	96054	STARTER SOLENOID	1		
21	10	40003 27	SCREW (14MM)	2		
22	11	26419	NUT (10-32)	2		
23	11	64015	NUT (1/4-20)	2		
24	84	88809A 5	WIRE ASSEMBLY (YELLOW)	1		
25	84	88439A 8	BATTERY WIRE (RED)	1		
25	84	88439A 6	BATTERY WIRE (BLACK)	1		
26		92439	BRACKET (OLD DESIGN)	1		
27	10	40003 27	SCREW (OLD DESIGN)	1		
28	12	35044	WASHER (OLD DESIGN)	1		
29	11	40021 2	NUT (OLD DESIGN)	1		
30	54	815504310	CLAMP (OLD DESIGN)	1		
31		86704A 2	STATOR ASSEMBLY	1		
32	10	40001 23	SCREW (30MM)	3		
33	50	90983A 1	STARTER MOTOR	1		
34		96561	DRIVE KIT	1		
35		96562	DRIVE	1		
36		96563	END CAP	1		
37		96565	ARMATURE	1		
38		96564	END CAP	1		
39	10	96566	THUR BOLT	1		
40	10	42125 1	SCREW	2		
41		42429 1	RETAINER	1		
42	84	12334A 2	ENGINE WIRING HARNESS	1	(REMOTE CONTROL MODELS)	
42	88	78091	FUSE	1		