



4623

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	4025	828353T 7	TOP COWL ASSEMBLY (Black-Ele	1	
1	4025	828353T 8	TOP COWL ASSEMBLY (Silver-Ele	1	
1	4026	828354T 6	TOP COWL ASSEMBLY (Black-Ma	1	
1	4026	828354A 7	TOP COWL ASSEMBLY (Silver-Ma	1	
2		828716A 2	CAP	1	
3		828352	SEAL	1	
4		828351 1	SEAL	1	
5		821875F 1	UPPER CAP (Black)	1	
5		821875F 2	UPPER CAP (Silver)	1	
6		819813T 1	BRACKET-COVER LATCH	1	
7		18173	BRACKET ASSEMBLY, Latch Rc	1	
8	13	53166	LOCKWASHER, (.312)	2	
9	10	90285	SCREW, (.312-18 x .625)	2	
10		F481434	GUIDE, Cowl Latch Bracket	2	
11	11	91925	PUSH NUT	4	
12	10	822512	SCREW, (.250-20 x 1.00)	3	
13	19	823865	CAP PLUG	2	
14	10	821300 16	SCREW, (M6 x 16)	4	
15		823830	SUPPORT	2	
16	10	823187 1	SCREW, (M4 x 14.5)	4	
17	13	26995	LOCKWASHER, (#8)	4	
18		823394 1	BRACKET	1	
19	11	823751 5	NUT, (M4)	4	
20		823685A 1	SOUND BLANKET KIT	1	
21		NSS	NOT SOLD SEPARATE, Sounk	1	
21		NSS	NOT SOLD SEPARATE, Sounk	1	
22		47341A11	ROPE AND HANDLE KIT, Manual	1	
23		NSS	NOT SOLD SEPARATE, Starter f	1	
24		NSS	NOT SOLD SEPARATE, Envelop	1	