



15172

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1255	8627A 6	OIL TANK	1		
2		99160	BOOT, Oil Tank, Upper	1		
3		44437	COVER	1		
4		98895	BRACKET, Oil Tank, Upper	1		
5	10	40094 30	SCREW, Oil Tank Bracket	2		
6	36	42653A 3	CAP ASSEMBLY, Oil Tank	1		
7	27	42999	GASKET	1		
8	10	12896	SCREW, (8-18 x .31), Switch	1		
9	87	12886A 3	SWITCH ASSEMBLY, Oil Tank	1		
10	43	43020 3	DRIVEN GEAR	1		
11	25	62705	O-RING, Oil Pump	2		1
12	32	43016 19	TUBING	1	(A = To Fuel Pump)	
13		42959A 1	OIL PUMP	1		
14		17335A 3	ADAPTOR ASSEMBLY, Oil Pump	1		
15	23	17597	BUSHING, Flanged, Adaptor	1		
16	23	17596	JOURNAL BUSHING, Adaptor	1		
17	10	40093 40	SCREW, Oil Pump	2		
18		42888	BASE, Oil Tank	1		
19	25	56291	GROMMET	1		
20	10	40113 50	SCREW, Base	2		
21		99161	BOOT, Oil Tank Base	1		
22	54	90077	STA STRAP	AR		6
23	32	43017 36	TUBING, Refer To Reference Num	3		
24	22	73318	TEE, Refer To Reference Number :	1		
23	32	43017 36	TUBING, Refer To Reference Num	2		
25	22	44456	FITTING, Refer To Reference Nurr	1		
26	32	90049 34	TUBING, (14.50 Inches Bulk) (10.0	1		
27	54	41582 3	CLAMP, Refer To Reference Numt	2		