



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	19	45907	PLUG, FLYWHEEL	1		
2	11	52901	NUT, FLYWHEEL ATTACHING	1		
3	12	68229	WASHER, FLYWHEEL ATTACHING	1		
4	248	5977A28	FLYWHEEL, ASSEMBLY, COMP.	1		
5	10	32417	SCREW, FLYWHEEL PLATE	8		
6	10	68997	SCREW, FLYWHEEL HUB	8		
7	398	5454A 8	STATOR ASSEMBLY	1		
8	10	75840	SCREW, STATOR ATTACHING (7	4		
9		68162A 8	TRIGGER PLATE ASSEMBLY	1		
10	54	61001	CLAMP, TRIGGER HARNESS	3		
11	50	72467	STARTER MOTOR	1		
12		56703	COLLAR, STARTER MOTOR	2		
13	23	56774	SPACER, STARTER MOTOR	AP		5
14		57247	STOP, RUBBER - STARTER MOT	2		
15	84	66008A 1	WIRE ASSEMBLY	1	PLATE TO STARTER MOTOR (B	
16	10	69035	SCREW, CABLE TO STARTER M(	1		
17	84	73453	WIRE ASSEMBLY	1	SOLENOID TO STARTER MOTO	
18	13	26992	LOCKWASHER, STARTER MOTO	1		
19	11	64015	NUT, STARTER MOTOR TERMIN	1		