



| Parts List |       |           |                              |     |                            |          |
|------------|-------|-----------|------------------------------|-----|----------------------------|----------|
| Ref        | Class | Part      | Description                  | Qty | Comment                    | Footnote |
| 1          |       | 92975A32  | HYDRAULIC PUMP ASSY          | 1   |                            |          |
| 2          | 25    | 48171     | "O" RING, MANIFOLD PLATE     | 4   |                            |          |
| 3          | 10    | 799530 Q  | SCREW, FILLER - HYDRAULIC    | 1   |                            |          |
| 4          | 12    | 19183 2   | WASHER, SEALING - FILLER S   | 1   |                            |          |
| 5          | 10    | 62269     | SCREW, VENT - HYDRAULIC PI   | 1   |                            |          |
| 6          |       | 32979     | BATTERY LEAD (POSITIVE)      | 1   |                            |          |
| 6          |       | 32988     | BATTERY LEAD (NEGATIVE)      | 1   |                            |          |
| 7          |       | 45336     | PLATE, MANIFOLD              | 1   |                            |          |
| 8          |       | 45197A 2  | CONTROL VALVE ASSEMBLY       | 1   |                            |          |
| --         | 25    | 48171     | "O" RING, MANIFOLD PLATE (S  | 4   |                            |          |
| 9          | 25    | 45254     | "O" RING, CONTROL VALVE (3,  | 1   |                            |          |
| 10         | 25    | 48171     | "O" RING, CONTROL VALVE (1,  | 1   |                            |          |
| 11         | 25    | 45253     | "O" RING, CONTROL VALVE (5,  | 2   |                            |          |
| 12         | 10    | 56500     | SCREW                        | 4   | VALVE AND MANIFOLD PLATE 1 |          |
| 13         | 22    | 46008     | PLUG, CONTROL VALVE (1/2-20" | 2   |                            |          |
| 14         | 84    | 74023A 1  | CONNECTOR AND HARNESS        | 1   |                            |          |
| 15         |       | 45377T    | BRACKET, MOUNTING            | 2   |                            |          |
| 16         | 10    | 35386     | SCREW                        | 4   | MOUNTING BRACKET TO HYDF   |          |
| 17         | 13    | 39107     | LOCKWASHER, MOUNTING BRA     | 4   |                            |          |
| 18         | 11    | 21908     | NUT, MOUNTING BRACKET TO B   | 4   |                            |          |
| 19         | 10    | 68298     | BOLT, HYDRAULIC PUMP TO BO.  | 2   |                            |          |
| 20         | 11    | 99405     | NUT, HYDRAULIC PUMP BOLT     | 2   |                            |          |
| 21         | 89    | 853654A 1 | STARTER SOLENOID             | 2   |                            |          |
| 22         | 13    | 26996     | LOCKWASHER, SOLENOID TERM    | 4   |                            |          |
| 23         | 11    | 68219     | NUT, SOLENOID TERMINAL (#10  | 4   |                            |          |
| 24         | 13    | 26993     | LOCKWASHER, SOLENOID TERM    | 4   |                            |          |
| 25         | 11    | 68292     | NUT, SOLENOID TERMINAL (5/11 | 4   |                            |          |
| 26         |       | 46265     | BOOT, RUBBER - STARTER SOLI  | 4   |                            |          |
| 27         |       | 74407T    | BRACKET, MOUNTING - STARTE   | 1   |                            |          |
| 28         | 10    | 21140     | SCREW                        | 2   | MOUNTING BRACKET TO HYDF   |          |
| 29         | 13    | 26992     | LOCKWASHER, MOUNTING BRA     | 2   |                            |          |
| 30         | 11    | 24656     | NUT                          | 1   | MOUNTING BRACKET TO HYDF   |          |
| 31         |       | 26901     | BUMPER, RUBBER - SOLENOID E  | 1   |                            |          |
| 32         |       | 79139A 2  | JUMPER WIRE (POSITIVE)       | 1   |                            |          |
| 32         |       | 55992     | JUMPER WIRE (NEGATIVE)       | 1   |                            |          |
| 33         |       | 74406     | BRACKET, MOUNTING - STARTE   | 1   |                            |          |
| 34         | 10    | 69028     | SCREW                        | 2   | MOUNTING BRACKET TO HYDF   |          |
| 35         | 13    | 26992     | LOCKWASHER, MOUNTING BRA     | 2   |                            |          |
| 36         | 10    | 34290     | SCREW                        | 2   | STARTER SOLENOID TO MOUN   |          |
| 37         | 13    | 26992     | LOCKWASHER, STARTER SOLEI    | 2   |                            |          |
| 38         | 11    | 21826     | NUT, STARTER SOLENOID SCRE   | 4   |                            |          |