



| Parts List |       |          |                               |     |                           |          |
|------------|-------|----------|-------------------------------|-----|---------------------------|----------|
| Ref        | Class | Part     | Description                   | Qty | Comment                   | Footnote |
| 1          | 2115  | 7719A 1  | BOTTOM COWL                   | 1   |                           |          |
| 2          |       | 52862A 2 | DRIP TRAY ASSEMBLY, BOTTOM    | 1   |                           |          |
| 3          |       | 37940    | PAD, SOUND - DRIP TRAY        | 1   |                           |          |
| 4          | 10    | 48408    | SCREW, DRIP TRAY TO BOTTOM    | 4   |                           |          |
| 5          | 32    | 34395A 1 | HOSE, DRIP TRAY TO BOTTOM (   | 1   |                           |          |
| 6          |       | 39616    | BOOT, CONTROL CABLES          | 1   |                           |          |
| 7          |       | 76369    | SPACER, BOTTOM COWL           | 1   |                           |          |
| 8          | 10    | 48591    | SCREW, SPACER TO BOTTOM C     | 2   |                           |          |
| 9          |       | 37637    | BOOT, FUEL CONNECTOR          | 1   |                           |          |
| 13         | 32    | 34395A 1 | HOSE, TELL TALE (21-1/2")     | 1   |                           |          |
| 14         |       | 52889    | NOZZLE, TELL TALE HOSE TO B   | 1   |                           |          |
| 15         | 10    | 48408    | SCREW                         | 1   | TELL TALE NOZZLE TO BOTTO |          |
| 16         | 22    | 78279    | ELBOW, TELL TALE HOSE TO Cy   | 1   |                           |          |
| 17         |       | 60304A54 | SHIFT SHAFT ASSEMBLY, UPPEF   | 1   |                           |          |
| 18         | 23    | 26600    | BUSHING, SHIFT SHAFT          | 1   |                           |          |
| 20         |       | 48047A 1 | LINK ROD ASSEMBLY             | 1   |                           |          |
| 21         | 12    | 35462    | WASHER, LINK ROD              | 2   |                           |          |
| 22         | 11    | 20664    | NUT, LINK ROD                 | 2   |                           |          |
| 23         | 13    | 29720    | WASHER, WAVE - INK ROD        | 1   |                           |          |
| 24         |       | 52732    | BRACKET, ANCHOR - CONTROL     | 1   |                           |          |
| 25         |       | 39519    | CAP, BARREL RETAINER          | 1   |                           |          |
| 26         |       | 39618    | LEVER, NYLON - SHIFT CABLE LI | 1   |                           |          |
| 27         | 17    | 47175    | PIN, LOCKING LEVER AND COVE   | 3   |                           |          |
| 28         |       | 39667    | COVER, NYLON - SHIFT CABLE    | 1   |                           |          |
| 29         |       | 65799    | LINK, LOCKING LEVER TO COVEI  | 1   |                           |          |
| 30         | 10    | 24234    | SCREW                         | 3   | ANCHOR BRACKET TO CYLINDE |          |
| 31         | 24    | 20099    | SPRING, LINK ROD TO GUIDE BL  | 1   |                           |          |
| 32         |       | 37896    | GUIDE BLOCK, LINK ROD         | 1   |                           |          |
| 33         |       | 52100    | WEAR PLATE, LINK ROD          | 1   |                           |          |
| 34         |       | 38279    | LATCH, CONTROL CABLE FASTE    | 1   |                           |          |