



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		98517A 2	PLATE ASSEMBLY, EXHAUST EX	1		
2	23	27132	BUSHING, NYLON - EXHAUST E	1		
3		37918	SEAL, EXHAUST EXTENSION F	1		
4		99358	STRIP, RETAINING - PLATE SE.	1		
5	10	37571	SCREW, SEAL AND RETAINING	5		
6	17	23784	DOWEL PIN, EXHAUST EXTEN	2		
7	27	69238	GASKET, POWERHEAD	1		2
8	10	66023	SCREW, ADAPTOR PLATE TO HO	2		
10	10	66023	SCREW	7	HOUSING PLATE TO DRIVE SHAF	
11	27	66102	GASKET, PLATE TO DRIVE SHAF	1		2
14	26	60898	SEAL, DRIVE SHAFT HOUSING P	1		
15		98518A 4	PLATE ASSEMBLY, DRIVE SHAF	1		
16	26	38970	SEAL, RUBBER - WATER INLET	1		2
17	17	23784	DOWEL PIN, DRIVE SHAFT HO	2		
18	27	62362	GASKET, MEGAPHONE	1		2
19		60437	MEGAPHONE, EXHAUST	1		
20	10	60480	SCREW, MEGAPHONE (1-1/8")	3		
21	12	29245	WASHER, MEGAPHONE SCREW	3		
22	12	25970	WASHER, POWERHEAD STUD	6		
23	11	34932	NUT, POWERHEAD STUD	6		
.	27	85653A32	GASKET SET			