



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	19	45907	PLUG, FLYWHEEL	1	
2	11	52901	NUT, FLYWHEEL	1	
3	12	68229	WASHER, FLYWHEEL	1	
4	248	8722A 7	FLYWHEEL ASSEMBLY	1	
5	10	32417	SCREW, FLYWHEEL PLATE	8	
6	10	68997	SCREW, FLYWHEEL HUB	8	
7	398	5454A17	STATOR ASSEMBLY	1	
8	10	75840	SCREW, STATOR (7/8")	4	
9		96455A 9	TRIGGER PLATE ASSEMBLY	1	
10	54	61001	CLAMP, TRIGGER HARNESS	1	
11	50	72467	STARTER MOTOR	1	
12		56703	COLLAR, STARTER MOTOR	2	
13	23	56774	SPACER, STARTER MOTOR	AP	12
14		57247	STOP, RUBBER - STARTER MOT	2	
15	84	93388A 1	WIRE, PLATE TO STARTER MOT	1	
16	10	69035	SCREW, CABLE TO STARTER M	1	
17	84	93389A 6	WIRE, SOLENOID TO STARTER	1	
18	13	26992	LOCKWASHER, STARTER MOTO	1	
19	11	64015	NUT, STARTER MOTOR TERMIN	1	