



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		89748T	PLATE, ELECTRICAL MOUNTING	1		
2	10	86885	SCREW, PLATE TO CYLINDER BI	4		
2	10	28636	SCREW, PLATE TO CYLINDER BI	3		
2	10	45561	SCREW, PLATE TO CYLINDER BI	2		
3	12	29245	WASHER, PLATE SCREW	9		
4	87	33386A	3 SWITCH ASSEMBLY, MERCURY	1		
5	10	25764	SCREW, MERCURY SWITCH TO	1		
6	11	45076	NUT, WIRE TO MERCURY SWIT	1		
7		62351A	1 RECTIFIER	1		
8	10	25764	SCREW, RECTIFIER TO IGNITIO	2		
9	11	45076	NUT, RECTIFIER TERMINALS	3		
10	89	96054	STARTER SOLENOID	1		
12	11	26419	NUT, SOLENOID TERMINALS (8-	2		
13	13	26992	LOCKWASHER, SOLENOID TERM	2		
14	11	94330	NUT, SOLENOID TERMINALS (1/	2		
15	10	28635	SCREW, STARTER SOLENOID TI	2		
16	13	26992	LOCKWASHER, STARTER SOLE	2		
17	85	97861	INSULATOR, STARTER SOLENO	1		
18	332	7778A	9 SWITCH BOX	2		
19	10	20619	SCREW, SWITCH BOX	4		
21	84	60871A	10 WIRE ASSEMBLY, SWITCH BOX	2		
22	10	69079	SCREW, WIRE	2		
23	84	62310A	3 CABLE ASSEMBLY	1	SWITCH BOX TO SWITCH BOX I	
24	11	45076	NUT, SWITCH BOX TERMINAL	20		
25	23	94304	SPACER	4		