



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	7719A 1	BOTTOM COWL	1		
2		52862A 2	DRIP TRAY ASSEMBLY, BOTTOM	1		
3		37940	PAD, SOUND - DRIP TRAY	1		
4	10	48408	SCREW, DRIP TRAY TO BOTTOM	4		
5	32	34395A 1	HOSE, DRIP TRAY TO BOTTOM (	1		
6		39616	BOOT, CONTROL CABLES	1		
7		76369	SPACER, BOTTOM COWL	1		
8	10	48591	SCREW, SPACER TO BOTTOM C	2		
9		37637	BOOT, FUEL CONNECTOR	1		
13	32	34395A 1	HOSE, TELL TALE (21-1/2")	1		
14		52889	NOZZLE, TELL TALE HOSE TO B	1		
15	10	48408	SCREW	1	TELL TALE NOZZLE TO BOTTO	
16	22	78279	ELBOW, TELL TALE HOSE TO Cy	1		
17		60304A54	SHIFT SHAFT ASSEMBLY, UPPER	1		
18	23	26600	BUSHING, SHIFT SHAFT	1		
20		48047A 1	LINK ROD ASSEMBLY	1		
21	12	35462	WASHER, LINK ROD	2		
22	11	20664	NUT, LINK ROD	2		
23	13	29720	WASHER, WAVE - INK ROD	1		
24		52732	BRACKET, ANCHOR - CONTROL	1		
25		39519	CAP, BARREL RETAINER	1		
26		39618	LEVER, NYLON - SHIFT CABLE LI	1		
27	17	47175	PIN, LOCKING LEVER AND COVE	3		
28		39667	COVER, NYLON - SHIFT CABLE	1		
29		65799	LINK, LOCKING LEVER TO COVEI	1		
30	10	24234	SCREW	3	ANCHOR BRACKET TO CYLIND	
31	24	20099	SPRING, LINK ROD TO GUIDE BL	1		
32		37896	GUIDE BLOCK, LINK ROD	1		
33		52100	WEAR PLATE, LINK ROD	1		
34		38279	LATCH, CONTROL CABLE FASTE	1		