



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2114	5399	COWL, TOP (WITHOUT DECALS)	1		
2		52733A 9	RETAINER ASSEMBLY, TOP COV	1		
3		35496	P&D, BUMPER - TOP COWL RE	1		
4	10	37558	SCREW, RETAINER TO TOP COV	1		
5	13	39107	LOCKWASHER, RETAINER TO TI	1		
6		76370	SHIELD, TOP COWL - REAR	1		
7	10	37370	SCREW, SHIELD TO TOP COWL	3		
8	13	37371	LOCKWASHER, SHIELD SCREW	3		
9		47341A 1	ROPE, STARTER (FOR MANUAL	1		
10		52739	HINGE, COWL LATCH - TOP COW	1		
11		52737	LEVER, COWL LATCH HINGE	1		
12	17	58998	PIN, ROLL - COWL LATCH LEVEF	1		
13		55455	HOOK, TOP COWL LATCH - REAF	1		
14	10	22956	SCREW, REAR HOOK TO TOP CC	2		
15	13	26992	LOCKWASHER, REAR HOOK MO	2		
16		79897	FRAME, TOP COWL SUPPORT	1		
18		63007	MOUNT, RUBBER - TOP COWL F	3		
18		46096	MOUNT, RUBBER - TOP COWL F	OPT	(HEAVY DUTY)	6
19	11	35888	NUT, RUBBER MOUNT TO TOP C	6		
20		86472	BRACKET, TOP COWL SUPPORT	1		
21		31014	MOUNT, RUBBER - REAR SUPPC	2		
22	13	26992	LOCKWASHER	2	RUBBER MOUNT TO REAR SUF	
23	11	29598	NUT	2	RUBBER MOUNT TO REAR SL	
24	10	37562	SCREW, REAR BRACKET TO FR	4		
26	13	26993	LOCKWASHER, REAR BRACKET	4		
27	10	37562	SCREW, REAR BRACKET TO BO	4		
28	13	26993	LOCKWASHER, REAR SUPPORT	4		
29		77103A 3	BRACKET ASSEMBLY, TOP COW	1		
30	10	69092	SCREW	2	FRONT BRACDET TO BOTTOM	
31	13	26993	LOCKWASHER	2	FRONT SUPPORT BRACKET SC	
32	10	69092	SCREW	2	FRONT BRACKET TO TOP COW	
33	13	26993	LOCKWASHER, FRONT SUPPOR	2		
34		37640	MOUNT, RUBBER FRONT SUPPC	1		
35	13	26993	LOCKWASHER	1	RUBBER MOUNT TO FRONT SI	
36	11	28770	NUT	1	RUBBER MOUNT TO FRONT SL	
37		87991	POINTER, TIMING	1		
38	10	28636	SCREW, TIMING POINTER ATTA	1		
39	12	35462	WASHER, TIMING POINTER SCR	1		