



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		92975A32	HYDRAULIC PUMP ASSY	1		
2	25	48171	"O" RING, MANIFOLD PLATE	4		
3	10	799530 Q	SCREW, FILLER - HYDRAULIC	1		
4	12	19183 2	WASHER, SEALING - FILLER S	1		
5	10	62269	SCREW, VENT - HYDRAULIC PI	1		
6		32979	BATTERY LEAD (POSITIVE)	1		
6		32988	BATTERY LEAD (NEGATIVE)	1		
7		45336	PLATE, MANIFOLD	1		
8		45197A 2	CONTROL VALVE ASSEMBLY	1		
--	25	48171	"O" RING, MANIFOLD PLATE (S	4		
9	25	45254	"O" RING, CONTROL VALVE (3,	1		
10	25	48171	"O" RING, CONTROL VALVE (1,	1		
11	25	45253	"O" RING, CONTROL VALVE (5,	2		
12	10	56500	SCREW	4	VALVE AND MANIFOLD PLATE 1	
13	22	46008	PLUG, CONTROL VALVE (1/2-20"	2		
14	84	74023A 1	CONNECTOR AND HARNESS	1		
15		45377T	BRACKET, MOUNTING	2		
16	10	35386	SCREW	4	MOUNTING BRACKET TO HYDF	
17	13	39107	LOCKWASHER, MOUNTING BRA	4		
18	11	21908	NUT, MOUNTING BRACKET TO BR	4		
19	10	68298	BOLT, HYDRAULIC PUMP TO BO.	2		
20	11	99405	NUT, HYDRAULIC PUMP BOLT	2		
21	89	853654A 1	STARTER SOLENOID	2		
22	13	26996	LOCKWASHER, SOLENOID TERM	4		
23	11	68219	NUT, SOLENOID TERMINAL (#10	4		
24	13	26993	LOCKWASHER, SOLENOID TERM	4		
25	11	68292	NUT, SOLENOID TERMINAL (5/11	4		
26		46265	BOOT, RUBBER - STARTER SOLI	4		
27		74407T	BRACKET, MOUNTING - STARTE	1		
28	10	21140	SCREW	2	MOUNTING BRACKET TO HYDF	
29	13	26992	LOCKWASHER, MOUNTING BRA	2		
30	11	24656	NUT	1	MOUNTING BRACKET TO HYDF	
31		26901	BUMPER, RUBBER - SOLENOID E	1		
32		79139A 2	JUMPER WIRE (POSITIVE)	1		
32		55992	JUMPER WIRE (NEGATIVE)	1		
33		74406	BRACKET, MOUNTING - STARTE	1		
34	10	69028	SCREW	2	MOUNTING BRACKET TO HYDF	
35	13	26992	LOCKWASHER, MOUNTING BRA	2		
36	10	34290	SCREW	2	STARTER SOLENOID TO MOUN	
37	13	26992	LOCKWASHER, STARTER SOLEI	2		
38	11	21826	NUT, STARTER SOLENOID SCRE	4		