



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2114	5399	TOP COWL (WITHOUT DECALS)	1	UNITED STATES 5825802 AND I	
2		52733A16	RETAINER ASSEMBLY, TOP COV	1	UNITED STATES 5825802 AND I	
3		35496	PAD, BUMPER - TOP COWL RE	1	UNITED STATES 5825802 AND I	
4	10	74824	SCREW, RETAINER TO TOP COV	1	UNITED STATES 5825802 AND I	
1	2114	7934	TOP COWL (WITHOUT DECALS)	1	UNITED STATES 5825803 AND I	
2		93122A 1	RETAINER ASSEMBLY, TOP COV	1	UNITED STATES 5825803 AND I	
4	10	53167	SCREW, RETAINER TO TOP COV	1	UNITED STATES 5825803 AND I	
5	13	39107	LOCKWASHER, RETAINER SCRE	1		
6		76370	SHIELD, TOP COWL - REAR	1		
7	10	37370	SCREW, SHIELD TO TOP COWL	3		
8	13	37371	LOCKWASHER, SHIELD SCREW	3		
9		47341A 1	ROPE, STARTER (FOR MANUAL	1		
10		52739	HINGE, COWL LATCH - TOP COV	1		
11		94918	LEVER, COWL LATCH HINGE	1		
12	17	58998	ROLL PIN, COWL LATCH LEVER	1		
13		55455	HOOK, TOP COWL LATCH - REAF	1		
14	10	22956	SCREW, REAR HOOK TO TOP CC	2		
15	13	26992	LOCKWASHER, REAR HOOK SCF	2		
16		79897	FRAME, TOP COWL SUPPORT	1		
18		90435	MOUNT, RUBBER - TOP COWL F	3		
18		46096	MOUNT, RUBBER - TOP COWL F	OPT		6
19	11	35888	NUT, RUBBER MOUNT	6		
20		86472	BRACKET, TOP COWL SUPPORT	1		
21		31014	MOUNT, RUBBER - REAR SUPPC	2		
22	13	26992	LOCKWASHER, RUBBER MOUN	2		
23	11	29598	NUT, RUBBER MOUNT	2		
24	10	37562	SCREW, REAR BRACKET TO FR	4		
26	13	26993	LOCKWASHER, REAR BRACKET	4		
27	10	37562	SCREW, REAR BRACKET TO BO	4		
28	13	26993	LOCKWASHER, REAR SUPPORT	4		
29		89232A 1	BRACKET ASSEMBLY, TOP COW	1		
30	10	69092	SCREW	2	FRONT BRACKET TO BOTTOM I	
31	13	26993	LOCKWASHER, FRONT SUPPOR	2		
32	10	69092	SCREW	2	FRONT BRACKET TO TOP COW	
33	13	26993	LOCKWASHER, FRONT SUPPOR	2		
34		37640	MOUNT, RUBBER - FRONT SUPP	1		
35	13	26993	LOCKWASHER, RUBBER MOUN	1		
36	11	28770	NUT, RUBBER MOUNT	1		
37		87991	POINTER, TIMING	1		
38	10	28636	SCREW, TIMING POINTER (3/4")	1		
39	13	26993	LOCKWASHER, TIMING POINTER SC	1		