



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1440	1796A 1	CLAMP BRACKET ASSEMBLY	2		
2		28403A 3	THUMB SCREW ASSEMBLY	2		
3	12	28404	WASHER, THUMB SCREW	2		
4		30664	TUBE, TILE - CLAMP BRACKET T	1		
5	15	30497A 1	SHIM, CLAMP BRACKET TILT TU	2		
6	11	30499	NUT, TILT TUBE FASTENING	2		
7		30498	CAP, PLASTIC - TILT TUBE	2		
8	23	20222	SPACER, CLAMP BRACKET STUC	1		
9	16	20221	STUD, CLAMP BRACKET	1		
10	13	26993	LOCKWASHER, CLAMP BRACKET	2		
11	11	20083	NUT, CLAMP BRACKET STUD	2		
12	17	30687A 1	TILT LOCK PIN SASEMBLY	1		
13	32	28052	SLEEVE< RUBBER - TILT LOCK F	1		
14	1453	2461A 4	SWIVEL BRACKET ASSEMBLY	1		
15	26	37448	OIL SEAL	2		
16	24	28659	SPRING, COIL - SWIVEL BRACK	1		
17	17	38311	PIN, COIL SPRING MOUNTING	1		
18	22	23612	FITTING, GREASE	1		
19		29359	LUBRICAP, SWIVEL BRACKET Gf	1		
20		30126A 1	TILT STOP LEVER ASSEMBLY	1		
21	10	30128	SCREW, TILT STOP LEVER ANCH	2		
22	13	31030	WASHER, WAVE - LEVER ANCHC	2		
23	11	29250	NUT, LEVER ANCHOR SCREW	2		
24	17	37462A 1	SWIVEL PIN AND STEERING ARM	1		
25		28203	BUMPER, STEERING ARM	1		
26	10	31257	BOLT, STEERING ARM TO UPPE	2		
27	11	22178	NUT, STEERING ARM BOLT FAS	2		
28	10	31830	SCREW, RIDE-GUIDE ATTACHIN	1		
29	11	20509	NUT, RIDE-GUIDE ATTACHING S	1		
30	12	37429	WASHER, SWIVEL PIN - LOWE	1		
31		37419	YOKE, BOTTOM	1		
32	11	37424	NUT, SWIVEL PIN RETAINING	1		
33		28205	STRAP STOP, DRIVE SHAFT HO	1		
34	10	28200	SCREW< STRAP STOP TO DRIV	1		
35	11	25269	NUT, STRAP STOP FASTENING	1		
36	23	28688	SPACER, RUBBER - COIL SPRING	2		
37	55	28416	PIN, UPPER SHOCK MOUNTING	1		
38	10	28009	BOLT, CLAMP BRACKET TO BOA	2		
39	12	28008	WASHER, CLAMP BRACKET BOL	2		
40	11	28010	NUT, CLAMP BRACKET BOLT	2		
41	28	21061	SERIAL PLATE	1		