



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1		30263A	FUEL PUMP ASSEMBLY - UPPER	2		
2	27	23005	GASKET, CHECK VALVE TO HO	2		
3	21	30430	VALVE, CHECK - FUEL PUMP	2		
4		23004	RETAINER, CHECK VALVE	1		
5	10	20037	SCREW, RETAINER TO HOUSII	2		
6	27	24863	GASKET, FUEL PUMP	2		
7		23014	DIAPHRAGM, FUEL PUMP	1		
8		30461A	FUEL PUMP ASSEMBLY - LOWEF	1		
2	27	23005	GASKET, CHECK VALVE TO HO	2		
3	21	30430	VALVE, CHECK - FUEL PUMP	2		
4		23004	RETAINER, CHECK VALVE	1		
5	10	20037	SCREW, RETAINER TO HOUSII	2		
6	27	24863	GASKET, FUEL PUMP	2		
7		23014	DIAPHRAGM, FUEL PUMP	1		
9		30275	COVER, FUEL PUMP	2		
10	27	30276	GASKET, FUEL PUMP COVER	2		
11	10	29878	SCREW, FUEL PUMP MOUNTING	1		
12	10	30274	SCREW, FUEL PUMP MOUNTAIN	2		
13	10	38036	SCREW, FUEL PUMP MOUNTING	1		
14	10	30273	SCREW< FUEL PUMP MOUNTING	2		
15	32	32256A	FUEL LINE ASSEMBLY, PUMP TC	1		
16	22	30174	ELBOW, UPPER CARBURETOR E	1		
17	22	30175	SLEEVE, CARBURETOR STRAINI	1		
18	22	30177	NUT, UPPER CARBURETOR STF	1		
19	32	31552A	FUEL LINE ASSEMBLY, PUMP TC	1		
20	32	31553A	FUEL LINE ASSEMBLY, PUMP TC	1		
21	32	30176	FUEL LINE, ADAPTOR TO LOWEI	1		
22	22	30174	ELBOW, LOWER FUEL PUMP INL	1		
23	22	30175	SLEEVE, FUEL PUMP INLET ELBI	1		
24	22	30177	NUT, FUEL PUMP INLET ELBOW	1		
25	22	37682	ELBOW, FUEL LINE TO ADAPTOF	1		
26		30186	ADAPTOR, CHECK UNIT (FUEL LI	1		
27		30187	STEM, CHECK UNIT ADAPTOR	1		
28	25	20415	"O" RING, ADAPTOR STEM	1		
29	24	30189	SPRING, ADAPTOR STEM	1		
30		30188	CUP WASHER, ADAPTOR	1		
31	10	37561	SCREW, ADAPTOR TO BOTTOM	2		
32	11	20184	NUT, ADAPTOR FASTENING SCF	2		
33	32	31550A	FUEL LINE ASSEMBLY, CARBURI	2		