



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	393	1282A17	DISTRIBUTOR ASSEMBLY, COM	1		
1	393	1282	HOUSING, PRIMARY	1		
2	22	25885A 1	ELBOW ASSEMBLY, VENT HOE	1		
3	393	1504A 5	BREAKER ASSEMBLY, COMPLE	2		
4	16	29230	STUD, PRIMARY LEAD AND I	2		
5	11	29236	NUT, PRIMARY LEAD FASTEN	2		
6	393	1586	GROMMET, PLASTIC - BREAK	2		
7	53	21058	"E" RING, BREAKER TO PIVO	2		
8	393	1287A 2	CAM WICK AND HOLDER ASS	2		
9	10	20597	SCREW, BREAKER HOLDER	2		
10	393	1656	WIRE, PRIMARY GROUND	1		
11	393	1283	CONDENSER	2		
12		38700	SNUBBER, CAPACITOR	1		
13	10	29434	SCREW, CONDENSER TO HOU	2		
14	30	26379	BEARING, BALL - CAM SHAFT	2		
15	17	25319	PIN, ROLL - CAM SHAFT	1		
16	393	1779A 2	SHAFT ASSEMBLY - DISTRIBU	1		
17	25	26543	"O"RING, CAM SHAFT	1		
18	23	28933	BUSHING, DISTRIBUTOR CAP	1		
19	13	26917	WASHER, WAVE - BALL BEARI	2		
20	27	26412	GASKET, HOUSING TO ADAPTI	1		
21	393	1278	ADAPTOR, HOUSING TO DISTRIB	1		
22	10	29180	SCREW, ADAPTOR TO HOUSIN	4		
23	393	1280A 1	ROTOR, DISTRIBUTOR	1		
24	27	36268	GASKET, DISTRIBUTOR CAP T	1		
25	393	1927A 5	DISTRIBUTOR CAP ASSEMBLY	1		
26	393	1293A 1	>BRUSH AND SPRING ASSEME	1		
27	22	31521	ELBOW, VENT HOSE - DISTR	1		
28	393	F1277	SIDE INLET ASSEMBLY	1		
29	393	1292A 1	BRUSH AND SPRING ASSEM	1		
30	27	26447	GASKET, SIDE INLET TO DISTR	1		
31	10	29167	SCREW, SIDE INLET TO DISTR	2		
32	10	29158	SCREW, DISTRIBUTOR CAP TO	4		
33	12	26436	WASHER, DISTRIBUTOR CAP F	4		
34	11	21806	NUT, DISTRIBUTOR CAP FAST	4		
35	393	1621A 1	HIGH TENSION CABLE ASSEM	1		
36	393	1622A 1	HIGH TENSION CABLE ASSEM	1		
37	393	1275	SLEEVE, TERMINAL END COV	2		
38		20121	CONNECTOR, HIGH TENSION	2		
39	25	26547	GROMMET, HIGH TENSION C	2		
40		22564A 4	SPARK PLUG LEAD ASSEMBLY	2	ORDER A 22564A1 KIT FOR REF	