



				Parts List			
Ref	Class	Part	Description	Qty	Comment	Footnote	
1	1128	1890A 1	END CAP ASSEMBLY, UPPER	1			
2	26	29476	OIL SEAL	1			
3	25	31305	"O" RING	1			
4	30	32117	BEARING, BALL	1			
5	15	31283A 1	SHIM, END CAP TO CRANKCASE	AR			
6	10	30225	SCREW, END CAP MOUNTING	4			
7	836	2486A 3	CYLINDER BLOCK AND CRANKCASE	1			
8	22	30139	PLUG, PIPE - WATER PRESSURE	1			
9	16	35099	STUD, CARBURETOR MOUNTING	6			
10	16	26133	STUD, CRANKCASE TO DRIVE SHAFT	2			
11	17	20033	PIN, DOWEL - CYLINDER BLOCK TO CRANKCASE	2			
12	17	20032	PIN, DOWEL - CYLINDER BLOCK TO CRANKCASE	3			
13	16	26134	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2			
14	16	37653	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2			
15	16	26135	STUD, CYLINDER BLOCK TO DRIVE SHAFT	2			
16	10	29877	SCREW< CRANKCASE TO CYLINDER BLOCK	3			
16	10	26132	SCREW< CRANKCASE TO CYLINDER BLOCK	2			
17	10	21574	SCREW, CRANKCASE TO CYLINDER BLOCK	1			
17	10	32293	SCREW, CRANKCASE TO CYLINDER BLOCK	3			
17	10	22040	SCREW< CRANKCASE TO CYLINDER BLOCK	17			
18	11	29250	NUT, CRANKCASE FASTENING	26			
19		26551	BRACKET, CLAMP EXTENSION	3			
20	10	36351	SCREW, MAIN BEARING LOCKING	3			
21	10	20359	SCREW< CENTER MAIN BEARING	2			
22	14	20091	TAB WASHER, BEARING BEARING	5			
23	1126	1751A 1	END CAP ASSEMBLY, LOWER	1			
24	21	28481A 1	CHECK VALVE ASSEMBLY, EXHAUST	1			
25	26	29476	OIL SEAL, LOWER	1			
26	26	29478	OIL SEAL, UPPER	1			
27	25	20081	"O" RING	1			
28	30	20080	BEARING, BALL	1			
29	15	20085A 1	SHIM, END CAP TO CRANKCASE	AR			
30	10	30225	SCREW, END CAP MOUNTING	3			
31	27	37740	GASKET, CYLINDER BLOCK TO EXHAUST MANIFOLD	1			
32		37713	PLATE, BAFFLE - EXHAUST MANIFOLD	1			
33	27	37741	GASKET, BAFFLE PLATE TO EXHAUST MANIFOLD	1			
34		37674	COVER, EXHAUST MANIFOLD	1			
35	10	38837	SCREW, MANIFOLD COVER MOUNTING	23			
36	13	21804	LOCKWASHER, SPARK PLUG LEADS	3			
37	54	37810	CLAMP, SPARK PLUG LEADS TO EXHAUST MANIFOLD	3			
38	22	22850	TUBE, BALANCE - MAIN BEARING	2			