



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		37817	WIRING HARNESS, INTERNAL	1		
2		30050	TERMINAL, HARNESS AND ME	AR		
3		26079	PLATE, WIRING HARNESS TO B	1		
4	10	26128	SCREW< HARNESS PLATE FAST	4		
5	24	28975	SPRING, GARTER - INTERNAL W	1		
6	54	22783	"S" CLIP, RECTIFIER HARNESS L	1		
7		32177A 1	RECTIFIER ASSEMBLY	1		
8	10	26065	SCREW, RECTIFIER TO MOUNTI	1		
9	11	29250	NUT, RECTIFIER MOUNTING SCF	1		
10	10	29852	SCREW, HARNESS TGERMINAL	1		
11	13	26996	LOCKWASHER, RECTIFIER STAT	2		
12	11	20645	NUT, FASTENING - RECTIFIER S	2		
13	50	37274A 1	STARTER MOTOR ASSEMBLY	1		
14		37332	PLATE, SPACER - STARTER MO	1		
15	10	22698	SCREW< STARTER MOTOR TO (2		
16	13	26993	LOCKWASHER, STARTER MOTO	2		
17		38747	BRACKET, SUPPORT - STARTER	1		
18	13	24669	LOCKWASHER, THRU BOLT	2		
19	11	20890	NUT, THRU BOLT - BRACKET TO	2		
20		32107	CABLE, WIRE - STARTER MOTO	1		
21	10	29197	SCREW, HARNESS GROUND LE	1		
22		32082	SOLENOID, STARTER	1		
23		32278A 1	GROUND STRAP ASSEMBLY, ST	1		
24	13	26993	LOCKWASHER, SOLENOID TERM	2		
25	11	20083	NUT, SOLENOID TERMINAL (5/1)	2		
26	13	26996	LOCKWASHER, SOLENOID TERM	2		
27	11	20645	NUT, SOLENOID TERMINAL (10)	2		
28	10	29282	SCREW, SOLENOID TO STARTE	2		
29	54	24836	CLIP, LEAD WIRRES TO SUPPO	1		
30	10	26548	SCREW, LEAD WIRE CLIP FASTE	1		
31		22789	"D" WASHER, CLIP FASTENING	1		
32	54	24871	CLAMP, WIRING HARNESS TO S	1		
33	10	26548	SCREW, HARNESS CLAMP FAST	1		
34		22789	"D" WASHER, HARNESS CLAMP	1		
35		29714	BLOCK, TGERMINAL - UPPER FU	1		
36	10	22245	SCREW, TGERMINAL BLOCK FAS	2		
37	13	26996	LOCKWASHER, TERMINAL BLOC	2		
38	12	26014	WASHER, TERMINAL BLOCK FS	2		
39		32227	BALLAST, IGNITION COIL	2		
40	10	28666	SCREW, BALLAST AND PORT CC	1		
41	12	26992	LOCKWASHER, BALLAST AND RI	1		