



Parts List								
Ref	Class	Part	Description	Qty	Comment	Footnote		
1	30	20066	BALL BEARING, DISTRIBUTOR H	1				
2	11	54209	NUT, ROTOR SHAFT TO DISTR	1				
3	23	53539	SLEEVE, ROTOR SHAFT	1				
4	393	3736A77	HOUSING ASSEMBLY, DISTRIBU	1				
5		53417	GROUND STRAP ASSEMBLY	1	DISTRIBUTOR TO CRANKCASE			
6	10	62568	SCREW, GROUND STRAP ATTACH	1				
7		58807A 1	FLAME, ARRESTOR, VENT - DIS	1				
8	15	55853	SHIM, BALL BEARING TO DISTR	1				
9	30	26379	BALL BEARING, DISTRIBUTOR H	1				
10	15	21148A 1	SHIM, BALL BEARING TO SPACE	AR		5		
11	23	53538	SPACER, ROTOR SHAFT	1				
12	53	26406	RING	1	RETAINER - BALL BEARING TO			
13	393	4313	DISC, ROTOR	1				
14	393	4312	ROTOR, DISTRIBUTOR	1				
15	54	60768	CLAMP, DISTRIBUTOR CAP TO C	1	PART OF DISTRIBUTOR CAP AS			
16	10	65774	SCREW, DISTRIBUTOR CAP CLA	1	PART OF DISTRIBUTOR CAP AS			
17	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1	PART OF DISTRIBUTOR CAP AS			
18	84	69207A 1	CABLE ASSEMBLY, CAP TO COIL	1				
19	25	26547	GROMMET, HIGH TENSION CA	1				
20	332	2854	BOOT, HIGH TENSION CABLE	1				
21		60096	BOOT, HIGH TENSION CABLE	1				
22	393	4841A 2	DISTRIBUTOR CAP ASSEMBLY	1				
--	393	1293A 1	BRUSH AND SPRING ASSEMB	1				
23		58807A 1	FLAME ARRESTOR, VENT - DIS	1				
24	27	55896	GASKET, DISTRIBUTOR CAP	1		7		
25	33	68057	SPARK PLUG (CHAMPION L-76V)	6				
26	84	63212A 2	SPARK PLUG LEAD ASSY #1, 2,	6	ORDER A-736549A1! KIT FOR RI			
--		20121	CONNECTOR, SPARK PLUG LEA	6				
27	85	71006A 1	PROTECTOR, SPARK PLUG LEA	6				
28		60096	BOOT, SPARK PLUG LEAD TO DI	6				
28A	23	62238 1	SLEEVE, SPARK PLUG LEAD (7")	6				
29	25	26547	GROMMET, SPARK PLUG LEADS	12				
30		45409	WIRE RETAINER, HIGH TENSIO	2				
31		45392	BRACKET, FRON - WIRE RETAIN	1				
32		47398	BRACKET, REAR - WIRE RETAIN	1				
33	10	62568	SCREW, FRONT AND REAR BRA	4				
34		45391	SPACER, RUBBER - HIGH TENSII	2				
-	27	60476A75	GASKET SET					