



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
	1623	6053A15	GEAR HOUSING ASSY, OCMP.	1	THE ENCLOSED GEAR HOUSIN	
-	1655	7333A24	GEAR HOUSING ASSY, COMP.	1	THE ENCLOSED GEAR HOUSIN	
1	1623	6053A 5	GEAR HOUSING ASSY	1	UNITED STATES 5160323 AND I	
1	1655	7333A23	GEAR HOUSING ASSY	1	UNITED STATES 5160324 AND I	
1A	22	85822A 1	CONNECOTR ASSEMBLY, SP	1	UNITED STATES 5160324 AND I	
2	17	46912	DOWEL PIN, GEAR HOUSING	2		
3	16	57921	STUD, GEAR HOUSING TO D	1		
4	16	57920	STUD	2	GEAR HOUSING TO DRIVE SHA	
5	16	56297	STUD	1	WATER PUMP BASE AND BODY	
6	16	30667	STUD	2	WATER PUMP BASE AND BODY	
7	31	32898	BEARING, ROLLER - DRIVE S	1		
8	45	69251	DRIVE SHAFT	1		
9	43	68548	GEAR, PINION - DRIVE SHAFT	1		
10	11	35921	NUT, PINION GEAR TO DRIVE :	1		
11	23	70412	SPACER, BALL BEARING TO B	1		
11	15	57007A 1	SHIM, BALL BEARING TO BASE	AR		5
12	31	69220	ROLLER BEARING, DRIVE SH	1		
14	27	33146	GASKET, WATER PUMP BASE	1		7
15	25	33145	"O" RING, WATER PUMP BASE	1		7
16	46	73804A 1	WATER PUMP BASE ASSEMBL	1		
17	26	31489	OIL SEAL, WATER PUMP BAS	1		
18	26	31507	OIL SEAL, WATER PUMP BAS	1		
19	17	35973	DOWL PIN	2	WATER PUMP BASE TO WATEF	
20	27	32433	GASKET	1	LOWER - WATER PUMP BASE T	7
21		32435	PLATE	1	FACE - WATER PUMP BASE TO	
22	27	32434	GASKET	1	UPPER - FACE PLATE TO WATE	7
23	46	64141A 1	WATER PUMP BODY ASSEMBL	1		
24		48752	INSERT, WATER PUMP BOD	1		
26	26	38970	SEAL, RUBBER - WATER INLI	1		
27	47	65960	IMPELLER, WATER PUMP	1		
28	28	56654	KEY, IMPELLER DRIVE	1		
29	10	30720	SCREW	1	WATER PUMP BODY TO GEAR	
30	13	26992	LOCKWASHER, WATER PUMP	1		
31	12	29245	WASHER	3	WATER PUMP BODY FASTENIN	
32	11	35888	NUT, WATER PUMP FASTENIN	2		
33	12	36001	WASHER, WATER PUMP BOD	1		
34	11	35814	NUT, WATER PUMP BODY FAS	1		
35	25	30271	RING	1	RUBBER - CENTRIFUGAL SLING	7
36	23	29804	SLEEVE, GUIDE - WATE INLET	1		
37		37641	SEAL, EXHAUST ELBOW	1		
38		28051	PLATE, SUPPORT - EXHAUST	1		