

Parts List

| Ref | Class | Part | Description | Qty | Comment | Footnote |
|-----|-------|----------|------------------------------|-----|---------|----------|
| 1 | 332 | 4895A 2 | IGNITION COIL ASSEMBLY | 1 | | |
| 2 | | 63194 | PAD, RUBBER - IGNITION COIL | 1 | | |
| 3 | | 63195 | COVER, IGNITION COIL | 1 | | |
| 4 | 10 | 69046 | SCREW, COIL TO CYLINDER BLC | 3 | | |
| 5 | 12 | 30164 | WASHER, COIL SCREW | 3 | | |
| 6 | 84 | 60466A 1 | CABLE ASSEMBLY | 1 | | |
| 7 | 11 | 45076 | NUT, IGNITION COIL TERMINAL | 2 | | |
| 8 | 84 | 66054A 2 | CABLE ASSEMBLY, COIL TO SWI | 1 | | |
| 9 | 10 | 62568 | SCREW, IGINTION COIL WIRE TC | 1 | | |
| 10 | | 69190 | PLATE, COIL MOUNTING | 1 | | |

