



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	852	6622A 3	CYLINDER BLOCK AND CRANKCASE	1		
2	27	53862	GASKET, CRANKCASE TO CYLINDER	1		7
3		66517	RESTRICTOR, CRANKCASE BLEED	5		
4	16	64280	STUD, CARBURETOR MOUNTING	6		
5	16	64281	STUD	2	CRANKCASE TO EXHAUST EXT	
6	17	20033	PIN, DOWEL - CRANKCASE TO	2		
7	17	63779	PIN, DOWEL - CYLINDER BLOC	3		
8	16	64282	STUD	6	CYLINDER BLOCK TO DRIVE SH	
9		56029	COVER, STARTER MOTOR BRACKET	1		
10	10	69762	SCREW, TOP COVER ATTACHING	1		
10	10	69267	SCREW, TOP COVER ATTACHING	1		
11	13	26993	LOCKWASHER, TOP COVER SCREW	2		
13		76867	COVER, STARTER MOTOR BRACKET	1		
14	10	69268	SCREW, BOTTOM ATTACHING	2		
15	13	26993	LOCKWASHER, BOTTOM COVER	2		
17	10	57841	SCREW, CRANKCASE TO CYLINDER	3		
17	10	32293	SCREW, CRANKCASE TO CYLINDER	4		
17	10	73657	SCREW, CRANKCASE TO CYLINDER	20		
18	12	22753	WASHER	25	CRANKCASE TO CYLINDER BLOCK	
19	11	29250	NUT	4	CRANKCASE TO CYLINDER BLOCK	
20	10	20359	SCREW, CENTER MAIN BEARING	2		
21	14	20091	TAB WASHER, BEARING LOCKING	2		
22		58124A 4	SWITCH, MERCURY	1		
23	10	69235	SCREW	1	SWITCH TO FRONT MOUNTING	
24	10	62568	SCREW, MERCURY SWITCH LEVER	1		
25	21	77560	CHECK VALVE, BLEED HOSE - UPPER	1		
26	32	54936	HOSE, BLEED (22")	1		
27	21	77561	CHECK VALVE, BLEED HOSE - LOWER	1		
28	22	20781	ELBOW, BALANCE HOSE	2		
29	32	34395A 1	HOSE, BALANCE - MAIN BEARING	2		
30	22	78742	TEE, BALANCE HOSE	1		
-	26	60476A75	GASKET SET			