



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	30	20066	BALL BEARING, DISTRIBUTOR H	1		
2	11	54209	NUT, ROTOR SHAFT TO DISTR	1		
3	23	53539	SLEEVE, ROTOR SHAFT	1		
4	393	3736A77	HOUSING ASSEMBLY, DISTRIBU	1		
5		53417	GROUND STRAP ASSEMBLY	1	DISTRIBUTOR TO CRANKCASE	
6	10	62568	SCREW, GROUND STRAP ATTACH	1		
7		58807A 1	FLAME, ARRESTOR, VENT - DIS	1		
8	15	55853	SHIM, BALL BEARING TO DISTR	1		
9	30	26379	BALL BEARING, DISTRIBUTOR H	1		
10	15	21148A 1	SHIM, BALL BEARING TO SPACE	AR		5
11	23	53538	SPACER, ROTOR SHAFT	1		
12	53	26406	RING	1	RETAINER - BALL BEARING TO	
13	393	4313	DISC, ROTOR	1		
14	393	4312	ROTOR, DISTRIBUTOR	1		
15	54	60768	CLAMP, DISTRIBUTOR CAP TO C	1	PART OF DISTRIBUTOR CAP AS	
16	10	65774	SCREW, DISTRIBUTOR CAP CLA	1	PART OF DISTRIBUTOR CAP AS	
17	11	26768	NUT, DISTRIBUTOR CAP CLAMP	1	PART OF DISTRIBUTOR CAP AS	
18	84	69207A 1	CABLE ASSEMBLY, CAP TO COIL	1		
19	25	26547	GROMMET, HIGH TENSION CA	1		
20	332	2854	BOOT, HIGH TENSION CABLE	1		
21		60096	BOOT, HIGH TENSION CABLE	1		
22	393	4841A 2	DISTRIBUTOR CAP ASSEMBLY	1		
--	393	1293A 1	BRUSH AND SPRING ASSEMB	1		
23		58807A 1	FLAME ARRESTOR, VENT - DIS	1		
24	27	55896	GASKET, DISTRIBUTOR CAP	1		7
25	33	68057	SPARK PLUG (CHAMPION L-76V)	6		
26	84	63212A 2	SPARK PLUG LEAD ASSY #1, 2,	6	ORDER A-736549A1! KIT FOR RI	
--		20121	CONNECTOR, SPARK PLUG LEA	6		
27	85	71006A 1	PROTECTOR, SPARK PLUG LEA	6		
28		60096	BOOT, SPARK PLUG LEAD TO DI	6		
28A	23	62238 1	SLEEVE, SPARK PLUG LEAD (7")	6		
29	25	26547	GROMMET, SPARK PLUG LEADS	12		
30		45409	WIRE RETAINER, HIGH TENSIO	2		
31		45392	BRACKET, FRON - WIRE RETAIN	1		
32		47398	BRACKET, REAR - WIRE RETAIN	1		
33	10	62568	SCREW, FRONT AND REAR BRA	4		
34		45391	SPACER, RUBBER - HIGH TENSII	2		
-	27	60476A75	GASKET SET			