



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1128	1890A 1	END CAP ASSEMBLY, UPPER	1,1	SERIAL 00000000-02019667	
1	1128	2744A 1	END CAP ASSEMBLY, UPPER	,1,1	SERIAL 02019668-09999999	
2	26	29476	OIL SEAL	1,1,1		
3	25	31305	"O" RING	1,1,1		2,4
4	30	32117	BEARING, BALL	1,1,1		
5	15	31283A 1	SHIM, END CAP TO CRANKCASE	AR,AR,		
6	10	30225	SCREW, END CAP MOUNTING	4,4,4		
7	836	2655A 3	CYLINDER BLOCK AND CRANKC	1,1,1		
8	22	30139	PLUG, PIPE - WATER PRESSUR	1,1,1		
9	16	35099	STUD, CARBURETOR MOUNTI	6,6,6		
10	16	26133	STUD, CRANKCASE TO DRIVE	2,2,2		
11	17	20033	PIN, DOWL - CRANKCASE TO C	2,2,2		
12	17	20032	PIN, DOWEL - CYLINDER BLOC	3,3,3		
13	16	26134	STUD, CYLINDER BLOCK TO D	2,2,2		
14	16	37653	STUD, CYLINDER BLOCK TO D	2,2,2		
15	16	26135	STUD, CYLINDER BLOCK TO D	2,2,2		
16	10	29877	SCREW, CRANKCASE TO CYLINC	3,3,3		
16	10	26132	SCREW, CRANKCASE TO CYLINC	2,2,2		
17	10	21574	SCREW, CRANKCASE TO CYLINC	1,1,1		
17	10	32293	SCREW, CRANKCASE TO CYLINC	3,3,		
17	10	32293	SCREW, CRANKCASE TO CYLINC	,,2		
--	12	26825	WASHER, CRANKCASE TO CYLIN	,,2		
17	10	22040	SCREW, CRANKCASE TO CYLINC	17,17,1		
17	10	33860	SCREW, CRANKCASE TO CYLINC	,,1		
18	11	46793	NUT, CRANKCASE FASTENING S	26,26,2		
19		26551	BRACKET, CLAMP EXTENSION	2,2,2		
20	10	36351	SCREW, MAIN BEARING LOCKIN	3,3,3		
21	10	20359	SCREW, CENTER MAIN BEARIN	2,2,2		
22	14	20091	TAB WASHER, BEARING LOCKIN	5,5,5		
23	1126	1751A 1	END CAP ASSEMBLY, LOWER	1,1,1		
24	21	28481A 1	CHECK VALVE ASSEMBLY, ENC	1,1,1		
25	26	29478	OIL SEAL, LOWER	1,1,1		
26	26	29476	OIL SEAL, UPPER	1,1,1		
27	25	20081	"O" RING	1,1,1		2,4
28	30	20080	BEARING, BALL	1,1,1		
29	15	20085A 1	SHIM, END CAP TO CRANKCASE	AR,AR,		
30	10	30225	SCREW, END CAP MOUNTING	3,3,3		
31	27	37740	GASKET, CYLINDER BLOCK TO E	1,1,1		2,4
32		37713	PLATE, BAFFLE - EXHAUST MAN	1,1,1	SERIAL 00000000-02211282	
32		47660	PLATE, BAFFLE - EXHAUST MAN	,,1	SERIAL 02211283-09999999	
32	27	22741	GASKET, BAFFLE PLATE TO EXH	1,1,1		