



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1623	2460A19	GEAR HOUSING ASSEMBLY, COV	1,	
-	1623	2460A18	GEAR HOUSING ASSEMBLY, COV	1,	
-	1623	2460A26	GEAR HOUSING ASSEMBLY, COV	,1,1	
-	1623	2460A27	GEAR HOUSING ASSEMBLY, COV	,1,1	
1	1623	2460A 4	GEAR HOUSING ASSEMBLY SI	1,	
1	1623	2460A20	GEAR HOUSING ASSEMBLY SI	,1,1	
53		36288	CAM, SHIFT	1,1,1	
54		30625	FOLLOWER, CAM	1,1,1	
55		30624	SLIDE, CROSS PIN	1,1,1	
56	24	30622	SPRING, COMPRESSION - CAM	1,1,1	
57	15	30923A 1	SHIM, BEARING OUTER RACE	AR,AR,	
--	43	34085A 1	FORWARD GEAR ASSEMBLY, C	1,1,1	
58	43	34085	FORWARD GEAR ASSEMBLY	1,1,1	
59	31	30895	BEARING, ROLLER - FORWARD	1,1,1	
60	31	30894A 1	TAPERED ROLLER BEARING	1,1,1	
61	31	31092	CUP, TAPERED ROLLER BE	1,1,1	
62	52	34239	RATCHET, SLIDING CLUTCH	1,1,1	
63	17	30632	PIN, CROSS - RATCHET TO PR	1,1,1	
64	24	30893	SPRING, RETAINING - CROSS	1,1,1	
65	44	32164	SHAFT, PROPELLER	1,1,1	
--	43	31887A 1	REVERSE GEAR ASSEMBLY, C	1,1,1	
66	43	31887	REVERSE GEAR ASSEMBLY	1,1,1	
67	30	31265	BEARING, BALL - REVERSE C	1,1,1	
68	12	30633	WASHER, THRUST - BEARIN	1,1,1	
69	15	29955A 1	SHIM, THRUST WASHER TO G	AR,AR,	
70	25	29976	"O" RING, BEARING CARRIER	1,1,1	2,4
71		31284A 1	BEARING CARRIER ASSEMBLY	1,1,1	
72	31	30956	BEARING, ROLLER - BEARIN	1,1,1	
73	26	30550	OIL SEAL, BEARING CARRIER	2,2,2	
74	28	30281	KEY, LOCATING - BEARING CA	1,1,1	
75	12	29957	WASHER, GEAR HOUSING COV	1,1,1	
76		31037	COVER, GEAR HOUSING	1,1,1	
77		31640	TRIM TAB, GEAR HOUSING	1,1,1	
78	10	32470	SCREW, TRIM TAB TO GEAR H	1,1,1	
79	12	45176	WASHER, GEAR HOUSING TO	,2,2	
80	11	22178	NUT, GEAR HOUSING TO DRIVE	2,2,2	
81	12	31013	WASHER, THRUST - BEARING C	1,1,1	
82		30581A 1	THRUST HUB AND WASHER AS	1,1,1	
83	12	29590	WASHER, CUPPED - THRUST	1,1,1	
84	12	31211	WASHER, SPLINED - PROPELLER	1,1,1	
85	14	31210	WASHER, PROPELLER NUT	1,1,1	