



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		39177	WIRING HARNESS, INTERNAL	1		
1		45070	WIRING HARNESS, INTERNAL	.1		
2		30050	TERMINAL, HARNESS AND ME	AR,AR		
3		26079	PLATE, WIRING HARNESS TO BI	1,1		
4	10	26128	SCREW, HARNESS PLATE FASTI	4,4		
5	24	28975	SPRING, GARTER - INTERNAL W	1,1		
6	10	45087	SCREW, GROUND WIRE TO BOT	.1		
7	13	25244	LOCKWASHER, GROUND WIRE	.1		
8	13	24669	LOCKWASHER, GROUND WIRE	.1		
9	11	20088	NUT, GROUND WIRE SCREW	.2		
10		32177A 1	RECTIFIER ASSEMBLY	1,1		
11	10	26065	SCREW, RECTIFIER TO MOUNTI	1,1		
12	11	29250	NUT, RECTIFIER MOUNTING SCF	1,1		
13	10	29852	SCREW, HARNESS TERMINAL LI	1,1		
14	332	2868A 1	CLIPPER, SHORTING	.1		
15	13	26996	LOCKWASHER, RECTIFIER STAT	2,2		
16	11	20645	NUT, FASTENING - RECTIFIER S	2,2		
17	50	37274A 1	STARTER MOTOR ASSEMBLY	1,1		
18		37332	PLATE, SPACER - STARTER MOT	1,		
18		45125	PLATE, SPACER - STARTER MOT	.1		
19	10	22698	SCREW, STARTER MOTOR TO C	2,2		
20	13	26993	LOCKWASHER, STARTER MOTO	2,2		
21		38747	BRACKET, SUPPORT - STARTER	1,1		
22	13	24669	LOCKWASHER, THRU BOLT	2,2		
23	11	20890	NUT, THRU BOLT - BRACKET TO	2,2		
24		25596	CABLE, WIRE - STARTER MOTO	.1		
25	10	29197	SCREW, HARNESS GROUND LE	1,1		
26		32107	CABLE, WIRE - STARTER MOTO	1,1		
27		32082	SOLENOID, STARTER	1,1		
28		32278A 1	GROUND STRAP ASSEMBLY, ST	1,1		
29	13	26993	LOCKWASHER, SOLENOID TERK	2,2		
30	11	20083	NUT, SOLENOID TERMINAL (5/1)	2,2		
31	13	26996	LOCKWASHER, SOLENOID TERK	2,2		
32	11	20645	NUT, SOLENOID TERMINAL (#10	2,2		
33	10	29282	SCREW, SOLENOID TO STARTE	2,2		
34	54	24836	CLIP, LEAD WIRES TO SUPPORT	1,		
35	10	26548	SCREW, LEAD WIRE CLIP FASTE	1,		
36		22789	"D" WASHER, CLIP FASTENING	1,		
37	54	24871	CLAMP, WIRING HARNESS TO S	1,		
38	10	26548	SCREW, HARNESS CLAMP FAST	1,		
39		22789	"D" WASHER, HARNESS CLAMP	1,		