



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	2115	2458	COWL, BOTTOM	1,1,1	SERIAL 00000000-02211282	
1	2115	3012	COWL, BOTTOM	,,1	SERIAL 02211283-09999999	
2		37415A 1	TRIM MOULDING ASSEMBLY, BC	1,1,1		
3		38046	SPLICER, TRIM MOULDING - RI	1,1,1		
4	10	29226	SCREW, DECORATIVE - MOULDI	5,5,5		
5	12	24671	WASHER, FIBER - MOULDING F	2,2,2		
6	11	29225	NUT, NYLON CAP - MOULDING	2,2,2		
7	13	26995	LOCKWASHER, MOULDING FA	3,3,3		
8	11	26419	NUT, BRASS - MOULDING FAS	3,3,3		
9		37920A 1	COVER PLATE ASSEMBLY, BOTI	1,1,1		
10		37940	PAD, SOUND - COVER PLATE	1,1,1		
11	10	30009	SCREW, COVER PLATE TO BOTI	4,4,4		
12		37638	BOOT, CONTROL CABLES - BOTI	1,1,1		
13		23760	BAFFLE, BOTTOM COWL	1,1,1		
14	10	21106	SCREW, BAFFLE TO BOTTOM CC	3,3,3		
15		37637	BOOT, FUEL CONNECTOR - BOT	1,1,1		
16		37445	SUPPORT, WIRING HARNESS - E	1,1,1		
17	10	37990	SCREW, WIRING HARNESS SUP	2,2,2		
18	11	46887	NUT, WIRING HARNESS SUPPOI	2,2,2		
19	32	26407	HOSE, TELL TALE - EXHAUST CC	1,1,1		
20	22	29111	CONNECTOR, TELL TALE HOSE	1,1,1		
21	22	25885	ELBOW, TELL TALE HOSE TO EX	1,1,1		
22	54	22976	CLAMP, TELL TALE HOSE TO CO	2,2,2		
23	27	37437	GASKET, POWERHEAD TO EXHA	1,1,1		2,4
24		38468A 4	PLATE ASSEMBLY, EXHAUST EX	1,1,1		
25	12	36446	WASHER, NYLON - WATER INLE	1,,		
26	26	36557	SEAL, RUBBER - WATER INLE1	1,,		
26	26	38970	SEAL, RUBBER - WATER INLE1	,1,1		2,4
27		38448	RETAINER, WATER TUBE SEA	1,1,1		
28	10	34439	SCREW, RETAINER TO EXHAU	1,1,1		
29	10	22421	SCREW, EXHAUST EXTENSION I	1,1,1		
30	11	46887	NUT, EXHAUST EXTENSION PLA	1,1,1		
31	27	38471	GASKET, EXHAUST EXTENSION	1,1,1		2,4
32		37918	SEAL, EXHAUST EXTENSION PL	1,1,1		
33		38032	STRIP, RETAINING - EXHAUST E	1,1,1		
34	10	37571	SCREW, SEAL&RETAINING STRI	5,5,5		
35		37824	BRACKET, SHIFT SHAFT HOLD C	1,1,1		
36	10	34222	SCREW, HOLD DOWN BRACKET	1,1,1		
37		37430A 1	SHIFT SHAFT ASSEMBLY, UPPEF	1,1,1		
37		37431A 1	SHIFT SHAFT ASSEMBLY, UPPEF	1,1,1		
38		27289	LINK ROD, SHIFT	1,1		