



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
-	393	1282A17	DISTRIBUTOR ASSEMBLY, COMF	1		
-	393	1282A22	DISTRIBUTOR ASSEMBLY, COMF	.1		
1	393	1282	HOUSING, PRIMARY	1.1		
2	22	25885A 1	ELBOW ASSEMBLY, VENT HOSE	1.1		
3	393	1504A 5	BREAKER ASSEMBLY, COMPLE	2.2		
4	16	29230	STUD, PRIMARY LEAD AND T	2.2		
5	11	29236	NUT, PRIMARY LEAD BREAK	2.2		
6	393	1586	GROMMET, PLASTIC - BREAK	2.2		
7	53	21058	"E" RING, BREAKER TO PIVO	2.2		
8	393	1287A 2	CAM WICK AND HOLDER ASE	2.2		
9	10	20597	SCREW, BREAKER HOLDER	2.2		
10	393	1656	WIRE, PRIMARY GROUND	1.1		
11	393	1283	CONDENSER	2		
--	23	45006	SPACER	.2		
--	393	2730	BRACKET, SPACER MOUNTING	.2		
12		38700	SNUBBER, CONDENSER AND S	1.1		
13	10	29434	SCREW, CONDENSER AND SP	2.2		
14	30	26379	BEARING, BALL - CAM SHAFT	2.2		
15	17	25319	PIN, ROLL - CAM SHAFT	1.1		
16	393	1779A 2	SHAFT ASSEMBLY - DISTRIBUTU	1		
16	332	2802A 2	SHAFT ASSEMBLY, DISTRIBUT	.1		
17	25	26543	"O" RING, CAM SHAFT	1.1		
18	23	28933	BUSHING, DISTRIBUTOR CAP	1.1		
19	13	26917	WASHER, WAVE - BALL BEARII	2.2		
20	27	26412	GASKET, HOUSING TO ADAPTI	1.1		4
21	393	1278	ADAPTOR, HOUSING TO DISTF	1.1		
22	10	29180	SCREW, ADAPTOR TO HOUSIN	4		
22	10	29180	SCREW, ADAPTOR TO HOUSING	.2		
23	393	1280A 1	ROTOR, DISTRIBUTOR	1.1		
24	27	36268	GASKET, DISTRIBUTOR CAP T	1.1		4
25	393	1927A 5	DISTRIBUTOR CAP ASSEMBLY	1		
25	393	1927A 9	DISTRIBUTOR CAP ASSEMBLY	.1		
26	393	1293A 1	BRUSH AND SPRING ASSEM	1.1		
27	22	31521	ELBOW, VENT HOSE - DISTR	1.1		
28	393	F1277	SIDE INLET COVER ASSEMBLY	1		
29	393	1292A 1	BRUSH AND SPRING ASSEM	1		
28	393	2725	COVER, SIDE INLET (NOT AS S	.1		
30	27	26447	GASKET, SIDE INLET COVER T	1.1		4
31	10	29167	SCREW, SIDE INLET COVER TI	2		
31	10	45380	SCREW, SIDE INLET COVER TI	.2		
32	54	24826	CLIP, DISTRIBUTOR LEAD WIR	1		