



19585

				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	17925A20	KEY SWITCH ASSEMBLY (20")	1		
2		90468A 1	COVER ASSEMBLY, Key	2		
3		76424	BRACKET	1		
4	16	55422	STUD, (#10-32 x 2.00)	2		
5	12	24676	WASHER, (.200 x .440 x .032)	2		
6	11	68219	NUT, (#10-32)	2		
7		816479	PLATE	1		
8	87	88107	KEY SWITCH (SEE CHART FOR	1		
9	11	93543	NUT, Special	1		
10	38	90311	INSERT	1		
11		68878A 6	ALARM HORN AND WIRE ASSE	1		
12		68879	COVER	1		
13	23	812711 1	SPACER, (.375)	2		
13	23	812711	SPACER, (.250)	2		
NS		89491 1	KEY, Ignition (1A)			
NS		89491 7	KEY, Ignition (2A)			
NS		89491 2	KEY, Ignition (1B)			
NS		89491 8	KEY, Ignition (2B)			
NS		89491 3	KEY, Ignition (1C)			
NS		89491 9	KEY, Ignition (2C)			
NS		89491 4	KEY, Ignition (1D)			
NS		89491 10	KEY, Ignition (2D)			
NS		89491 5	KEY, Ignition (1E)			
NS		89491 11	KEY, Ignition (2E)			
NS		89491 6	KEY, Ignition (1F)			
NS		89491 12	KEY, Ignition (2F)			