



11978

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1647	9148A47	GEAR HOUSING	1	(Basic, Black)	
1	1647	9148A48	GEAR HOUSING	1	(Basic, Gray)	
67	31	15841	ROLLER BEARING	1		
68	12	17616	THRUST RING	1		
69	25	31534	O-RING	1		4,8
70		18447A 2	BEARING ADAPTOR	1		
71	31	15843	ROLLER BEARING	1		
72	12	18448	THRUST WASHER	2		
73	31	15842	BEARING, Thrust	2		
74	44	18446	PROPELLER SHAFT	1		
75		818896A 2	BEARING CARRIER	1		
76	31	30956	BEARING, Needle	1		
77	26	76868	SEAL, Inside	1		
78	26	76868	SEAL, Outside	1		
79	28	30281	KEY	1		
80	14	18323 1	TAB WASHER	1		
81		79448	RETAINER	1		
82		31640 5	TRIM TAB	1		
83	10	806327	SCREW, (.437-14 x 1.750)	1		
84	10	65210	SCREW, (.375-16 x 1.00)	1		
85	12	45176	WASHER, (.453 x .812 x .105)	2		
86	11	34933	NUT, (.437-20)	2		
87	12	835467 1	THRUST HUB	1	(These Replacement Parts AreNot	5
88	13	42351 1	LOCKWASHER, Toothed	1	(These Replacement Parts AreNot	
89	12	31211A 2	WASHER, Splined	1	(These Replacement Parts AreNot	
90	11	52707A 1	NUT KIT, Propeller	1	(These Replacement Parts AreNot	
91	14	816629	TAB WASHER	1	(These Replacement Parts AreNot	
-	27	815791A92	ENGINE GASKET SET	1		
-	26	89238A 2	SEAL KIT	1		