



19032

Parts List

| Ref | Class | Part | Description | Qty | Comment | Footnote |
|-----|-------|----------|---------------------------------|-----|---------------------------|----------|
| 1 | | 43429 | PLATE, IGNITION | 1 | | |
| 2 | 332 | 7778A 6 | SWITCH BOX | 2 | | |
| 3 | 10 | 13669 | SCREW, (12-24 x 2.00), SWITCH | 2 | | |
| 4 | 23 | 94304 | SPACER, SWITCH BOX SCREW | 2 | | |
| 5 | 23 | 94453 | BUSHING, SWITCH BOX SCREW | 2 | | |
| 6 | 84 | 62310A 2 | CABLE ASSEMBLY, SWITCH BOX | 1 | | |
| 7 | 11 | 45076 | NUT, (#10-32), SWITCH BOX TER | 20 | | |
| 8 | 84 | 60871A10 | WIRE ASSEMBLY, SWITCH BOX | 2 | | |
| 9 | 10 | 62568 | SCREW, (#10-16 x .375), WIRE A1 | 2 | | |
| 10 | 10 | 38055 | SCREW, (.190-32 x .620), CABLE | 1 | | |
| 11 | 84 | 65999A 3 | CABLE ASSEMBLY, (Black) | 1 | | |
| 12 | 10 | 69092 | SCREW, (1.25), IGNITION PLATE | 3 | | |
| 13 | 13 | 26993 | LOCKWASHER, (.312), IGNITION | 3 | | |
| 14 | 12 | 36042 | WASHER, IGNITION PLATE SCRE | 6 | | |
| 15 | 12 | 67264 | WASHER, (Rubber), IGNITION PL | 6 | | |
| 16 | 23 | 67268 | BUSHING, IGNITION PLATE SCRI | 3 | | |
| 17 | | 62351A 1 | RECTIFIER | 1 | | |
| 18 | 10 | 38055 | SCREW, (.190-32 x .620), MERCUI | 2 | | |
| 19 | 11 | 45076 | NUT, (#10-32), RECTIFIER TERMI | 3 | | |
| 20 | 87 | 33386A 3 | SWITCH ASSEMBLY | 1 | | |
| 21 | 10 | 38055 | SCREW, (.190-32 x .620), MERCUI | 1 | | |
| 22 | 11 | 45076 | NUT, (#10-32), MERCURY SWITC | 1 | | |
| 23 | 10 | 87926 | SCREW, (#10-32 x .500), LEAD AT | 1 | | |
| 24 | 84 | 88439A14 | BATTERY CABLE, POSITIVE | 1 | | |
| 24 | 84 | 88439A 2 | BATTERY CABLE, NEGATIVE | 1 | | |
| 25 | 84 | 96220A 4 | HARNESS, ENGINE | 1 | | |
| 26 | 88 | 79091 | FUSE, 20 Ampere | 1 | | |
| 27 | 84 | 95084A 2 | CABLE ASSEMBLY, FUSE | 1 | | |
| 28 | | 73498 | CLAMP, HARNESS AND CABLES | 3 | | |
| 29 | 89 | 96054 | SOLENOID ASSEMBLY, Starter | 1 | (8-32 1/4-20 TERMINALS) | |
| 30 | 11 | 26419 | NUT, (#8-32), SOLENOID TERMIN | 2 | (8-32 1/4-20 TERMINALS) | |
| 31 | 13 | 26992 | LOCKWASHER, (.250), SOLENOID | 2 | (8-32 1/4-20 TERMINALS) | |
| 32 | 11 | 94330 | NUT, (.250-20), SOLENOID TERM | 2 | (8-32 1/4-20 TERMINALS) | |
| 29 | 89 | 15857 | STARTER SOLENOID | 1 | (10-32 5/16-18 TERMINALS) | |
| 30 | 11 | 45076 | NUT, (#10-32), SOLENOID TERMI | 2 | (10-32 5/16-18 TERMINALS) | |
| 31 | 13 | 53166 | LOCKWASHER, (.312), SOLENOID | 2 | (10-32 5/16-18 TERMINALS) | |
| 32 | 11 | 68292 | NUT, (.312-18), SOLENOID TERM | 2 | (10-32 5/16-18 TERMINALS) | |
| 33 | 10 | 31716 | SCREW, (.250-20 x .62), SOLENOI | 2 | | |
| 34 | 13 | 26992 | LOCKWASHER, (.250), SOLENOID | 2 | | |
| 35 | 84 | 65999A 2 | CABLE ASSEMBLY, (Black), UPPE | 1 | | |
| 36 | 85 | 97861 | INSULATOR, SOLENOID | 1 | | |