



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		826800A 8	DETONATION CONTROLLER ASSEMBLY	1	200	
2	10	88447	SCREW (3/16-32 X 1-5/8)	3	200	
3	12	38833	WASHER	3	200	
4		13381	PLATE	1	200	
5	84	88807A10	CABLE ASSEMBLY	1	200	5
6	10	62568	SCREW	1	200	
7	23	94304	BUSHING	3	200	
8		41470A25	OIL INJECTION WARNING MODULE	1		
9		14851	INDICATOR-THROTTLE POSITION	1		
10	10	15150	SCREW (8-32 X 5/8)	2		
11	13	26995	LOCKWASHER	2		
12	12	30164	WASHER	2		
13	23	15885	SLEEVE	1		
14		813501	PLATE	2		
15		13221A 1	TEMPERATURE SENSOR ASSEMBLY	1		
16	25	45711	O-RING	1		2
17	10	57583	SCREW (8-32 X 3/8)	3		
18	13	26995	LOCKWASHER	3		
-	27	815791A92	ENGINE GASKET SET	1		