



18963

Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1647	9148A18	GEAR HOUSING (LONG) (BLACK)	1	
-	1647	9148A19	GEAR HOUSING (X-LONG) (BLAC)	1	
-	1647	9148A20	GEAR HOUSING (LONG) (GRAY)	1	
-	1647	9148A21	GEAR HOUSING (X-LONG) (GRAY)	1	
-	1647	9148A36	GEAR HOUSING (LONG) (OYSTER)	1	
-	1647	9148A25	GEAR HOUSING (X-LONG) (OYST)	1	
1	1647	9148A11	GEAR HOUSING ASSEMBLY (BI)	1	
1	1647	9148A12	GEAR HOUSING ASSEMBLY (G)	1	
1	1647	9148A24	GEAR HOUSING ASSEMBLY (O)	1	
48		89594A	FOLLOWER, CAM	1	
49		78956	SHIFT CAM	1	
50		79911	ROD, CLUTCH ACTUATOR	1	
51	24	79910	SPRING, COMPRESSION	2	
52	12	78910	WASHER, COMPRESSION SPR	AR	
53	17	78906	PIN, SPRING LOCATOR	1	
54	15	47397A	SHIM SET, BEARING OUTER R.	AR	
55	31	78172A	BEARING ASSEMBLY, Tapered	1	
56	43	44102A	FORWARD GEAR ASSEMBLY	1	
57	31	73363	ROLLER BEARING, FORWARD	2	
58	52	78959	RATCHET, SLIDING CLUTCH	1	
59	17	78905	PIN, Cross, RATCHET TO PROP	1	
60	17	78909	PIN, Detent, RATCHET	2	
61	24	78962	SPRING, RETAINING - CROSS	2	
62	44	94148	PROPELLER SHAFT	1	
63		N.S.S.	Not Sold Seperate, Reverse Gear	1	11
64		68100	RING, THRUST-BEARING CARF	1	
65	30	88957A	BEARING, BALL - REVERSE GE	1	
66	25	31534	O-RING, BEARING CARRIER	1	2,11
67		43567A	BEARING CARRIER ASSEMBLY	1	
68	31	30956	BEARING, Needle, BEARING C	1	
69	26	76868	SEAL, BEARING CARRIER	2	11
70	28	30281	KEY, LOCATING - BEARING CA	1	
71	14	79447	TAB WASHER, GEAR HOUSING	1	
72		79448	RETAINER, GEAR HOUSING	1	
73		31640A	TRIM TAB ASSEMBLY, GEAR H	1	
74	10	66024	SCREW, (.437-14 x 1.75), TRIM	1	
75	12	45176	WASHER, (.453 x .812 x .105), DR	2	
76	11	34933	NUT, (.437-20), DRIVE SHAFT HO	2	
77	10	65210	SCREW, (.375-16 x 1.00), GEAR H	1	
77	10	74727	SCREW, (.375-16 x 6.00), GEAR H	1	
78		12171	THRUST HUB	1	