



19580

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	1647	9148A27	GEAR HOUSING (X-LONG) (BLAC)	1		
-	1647	9148A28	GEAR HOUSING (X-LONG) (GRAY)	1		
1	1647	9148A11	GEAR HOUSING ASSEMBLY, B	1		
1	1647	9148A12	GEAR HOUSING ASSEMBLY, B	1		
47		78956	SHIFT CAM	1		
48		89594A 1	FOLLOWER, CAM	1		
49		79911	ROD, CLUTCH ACTUATOR	1		
50	24	79910	SPRING, COMPRESSION	2		
51	12	78910	WASHER, SPRING	AR		
52	17	78906	PIN, SPRING LOCATOR	1		
53		14469	BEARING CUP	1		
54	30	88957A 1	BEARING	1		
55		N.S.S.	Not Sold Seperate, Reverse Gear	1		
56	31	15844	BEARING ASSEMBLY, Roller	1		
57	17	78909	PIN, Detent, RATCHET	2		
58	52	78959	RATCHET, SLIDING CLUTCH	1		
59	17	78905	PIN, Cross, RATCHET	1		
60	24	78962	SPRING, RETAINING - CROSS	2		
61	43	18572A 1	FORWARD GEAR	1		
62	23	17615 1	SPACER SHIM	AR	(.125)	
62	23	17615 2	SPACER SHIM	AR	(.127)	
62	23	17615 3	SPACER SHIM	AR	(.129)	
62	23	17615 4	SPACER SHIM	AR	(.131)	
62	23	17615 5	SPACER SHIM	AR	(.133)	
62	23	17615 6	SPACER SHIM	AR	(.135)	
62	23	17615 7	SPACER SHIM	AR	(.137)	
62	23	17615 8	SPACER SHIM	AR	(.139)	
62	23	17615 9	SPACER SHIM	AR	(.141)	
62	23	17615 10	SPACER SHIM	AR	(.143)	
62	23	17615 11	SPACER SHIM	AR	(.145)	
62	23	17615 12	SPACER SHIM	AR	(.147)	
62	23	17615 13	SPACER SHIM	AR	(.149)	
63	31	15841	ROLLER BEARING	1		
64	12	17616	THRUST RING	1		
65	25	31534	O-RING, BEARING CARRIER	1		7
66		18447A 2	BEARING ADAPTOR	1		
67	31	15843	ROLLER BEARING	1		
68	12	18448	THRUST WASHER	2		
69	31	15842	BEARING, Thrust	2		
70	44	18446	PROPELLER SHAFT	1		
71		18444A 1	BEARING CARRIER	1		