



19585

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	17925A20	KEY SWITCH ASSEMBLY (20&apc	1		
2		90468A 1	COVER ASSEMBLY, Key, IGNITI	2		
3		76424	BRACKET, IGNITION SWITCH	1		
4	16	55422	STUD, (#10-32 x 2.00), SWITCH	2		
5	12	24676	WASHER, (.200 x .440 x .032), S	2		
6	11	68219	NUT, (#10-32), SWITCH ATTACI	1		
7		89976	PLATE, SWITCH MOUNT	1		
8	87	88107	KEY SWITCH, IGNITION (SEE B	1		
9	11	93543	NUT, Special, IGNITION SWIT	1		
10	38	90311	INSERT, SWITCH PLATE	1		
11		68878A 2	ALARM HORN AND WIRE ASSE	1		
12		68879	COVER, ALARM HORN	1		
13	23	812711 1	SPACER, (.375)	2		
13	23	812711	SPACER, (.250)	2		
-		89491 1	KEY	1	(1A)	
-		89491 2	KEY, Ignition	1	(1B)	
-		89491 3	KEY 1C	1		
-		89491 4	KEY 1D	1		
-		89491 5	KEY 1E	1		
-		89491 6	KEY 1F	1		
-		89491 7	KEY 2A	1		
-		89491 8	KEY 2B	1		
-		89491 9	KEY 2C	1		
-		89491 10	KEY, Ignition (2D)	1		
-		89491 11	KEY, Ignition (2E)	1		
-		89491 12	KEY, Ignition (2F)	1		