



18496

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		43429	PLATE, IGNITION	1		
2	332	7778A 9	SWITCH BOX	2		
3	10	13669	SCREW, (12-24 x 2.00), SWITCH	2		
4	23	94453	BUSHING, SWITCH BOX SCREW	2		
5	84	62310A 2	CABLE ASSEMBLY, SWITCH BOX	1		
6	11	45076	NUT, (#10-32), SWITCH BOX TER	20		
7	84	60871A10	WIRE ASSEMBLY, SWITCH BOX	2		
8	10	62568	SCREW, (#10-16 x .375), WIRE A	3		
9	84	65999A 3	CABLE ASSEMBLY, (Black)	1		
10	10	69092	SCREW, (1.25), IGNITION PLATE	3		
11	13	26393	LOCKWASHER, (.312), IGNITION	3		
12	12	36042	WASHER, IGNITION PLATE SCRI	6		
13	12	67264	WASHER, (Rubber), IGNITION PL	6		
14	23	67268	BUSHING, IGNITION PLATE SCRI	3		
15	87	33386A 3	SWITCH ASSEMBLY	1		
16	10	38055	SCREW, (.190-32 X .62)	1		
17	11	45076	NUT, (#10-32), MERCURY SWITC	1		
18	10	87926	SCREW, (#10-32 x .500), LEAD AT	1		
19	84	88439A 3	BATTERY CABLE, Positive, MERC	1		
19	84	88439A 2	BATTERY CABLE, NEGATIVE - MI	1		
20	84	96220A12	HARNES, ENGINE	1		
21	88	79091	FUSE, (20 Ampere)	1		
22	84	95084A 2	CABLE ASSEMBLY, FUSE	1		
23		13473 1	FUSE HOLDER	1		
24	54	90077	STA STRAP, HARNES AND CAB	AR		
25	89	15857	STARTER SOLENOID	1		
26	11	45076	NUT, (#10-32), SOLENOID TERMI	2		
27	13	53166	LOCKWASHER, (.312), SOLENOID	2		
28	11	68292	NUT, (.312-18), SOLENOID TERM	2		
29	10	31716	SCREW, (.250-20 x .62), SOLENOI	2		
30	13	26392	LOCKWASHER, (.250)	2		
31	84	65999A 2	CABLE ASSEMBLY, (Black), UPPE	1		
32	85	78866	INSULATOR, SOLENOID	1		
33	54	47483	J CLIP	2		