



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1647	9148A93	GEAR HOUSING	1	(BASIC-BLACK)	
1	1647	9148A94	GEAR HOUSING	1	(BASIC-GRAY)	
65	31	815480	ROLLER BEARING	1		
66	12	815481	THRUST WASHER	1		
67		828831A 1	BEARING ADAPTOR ASSEMBLY	1		
68	31	814653	ROLLER BEARING	1		
69	12	18448	THRUST WASHER	2		
70	31	15842	THRUST BEARING	2		
71		818291 1	THRUST RACE	2		
72		814605	KEEPER	2		
73	25	31534	O RING	1		9
74		818290A 4	BEARING CARRIER ASSEMBLY	1		
75	31	30956	ROLLER BEARING	1		
76	26	14077	OIL SEAL (INSIDE)	1		
77	26	76868	OIL SEAL (OUTSIDE)	1		9
78	14	18323 1	TAB WASHER	1		
79	28	30281	KEY	1		
80		79448	COVER	1		
81		31640 5	TRIM TAB	1		
81		76214A 5	ANODIC PLATE	1	(TRACKER)	
82	10	806327	SCREW	1		
83	10	65210	SCREW (.375-16 X 1)	1		
84	12	45176	WASHER	2		
85	11	34933	NUT	2		
86	12	835467 1	THRUST HUB	1	THESE REPLACEMENT PARTS .	5
87	13	42351 1	LOCKWASHER	1	THESE REPLACEMENT PARTS .	
88	12	31211A 2	WASHER	1	THESE REPLACEMENT PARTS .	
89	11	52707A 1	PROPELLER NUT	1	THESE REPLACEMENT PARTS .	
90	14	816629	TAB WASHER	1	THESE REPLACEMENT PARTS .	
.	26	89238A 2	G/H SEAL KIT	1		