



				Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	17925A20	KEY SWITCH ASSEMBLY (20')	1		
2		90468A 1	COVER, IGNITION SWITCH KEY	2		
3		76424	BRACKET, IGNITION SWITCH	1		
4	16	55422	STUD, SWITCH ATTACHING	2		
5	12	24676	WASHER, W/SWITCH ATTACHI	2		
6	11	68219	NUT, SWITCH ATTACHING STL	2		
7		89976	PLATE, SWITCH MOUNT	1		
8	87	88107	SWITCH IGNITION (SEE BELOW	1		
9	11	93543	NUT, IGNITION SWITCH	1		
10	38	90311	INSERT, SWITCH PLATE	1		
11		68878A 6	ALARM HORN ASSEMBLY	1		
12		68879	COVER, ALARM HORN	1		
13	23	812711 1	SPACER (3/8")	2		
13	23	812711	SPACER (1/4")	2		
-		89491 1	KEY 1A	1		
-		89491 2	KEY 1B	1		
-		89491 3	KEY 1C	1		
-		89491 4	KEY 1D	1		
-		89491 5	KEY 1E	1		
-		89491 6	KEY 1F	1		
-		89491 7	KEY 2A	1		
-		89491 8	KEY 2B	1		
-		89491 9	KEY 2C	1		
-		89491 10	KEY 2D	1		
-		89491 11	KEY 2E	1		
-		89491 12	KEY 2F	1		