



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1590	8343A 7	DRIVE SHAFT HOUSING (LONG)	1	
1	1590	8343A 8	DRIVE SHAFT HOUSING (LONG)	1	
1	3503	9748A 1	DRIVE SHAFT HOUSING (X-LON)	1	
1	3503	9748A 2	DRIVE SHAFT HOUSING (X-LON)	1	
2	16	56295	STUD, DRIVE SHAFT HSG./GE/	2	
3		25067	BUMPER, LOWER MOUNT SCRE	2	
4	10	63474	SCREW, LOWER MOUNT	2	
5		78249	MOUNT, LOWER (LONG)	2	
5		77327	MOUNT, LOWER (X-LONG)	2	
6	12	49339	WASHER, LOWER MOUNT SCRE	2	
7	11	25096	NUT, LOWER MOUNT SCREW	2	
8		88238A 1	GROUND WIRE ASSEMBLY	1	
9	54	67076	CLAMP, LOWER MOUNT	2	
10	10	66727	SCREW, LOWER MOUNT CLAMP	4	
11		67077	COVER, LOWER MOUNT CLAMP	2	
11		67077T 6	COVER, LOWER MOUNT CLAMP	2	
12	10	88417	SCREW, COVER ATTACHING (5/	4	
13	11	35521	NUT, NYLON - COVER TO CLAMP	4	
14		88238A 2	GROUND WIRE ASSEMBLY	1	
15	10	41508	SCREW, GROUND WIRE	1	
16	12	73862	WASHER, GEAR HOUSING STUC	1	
17	11	29489	NUT, GEAR HOUSING STUD (CAI	1	
18	12	45176	WASHER, GEAR HOUSING STUC	2	
19	11	34933	NUT, GEAR HOUSING STUD	2	
20	19	64649	PLUG, DRIVE SHAFT HOUSING	1	
21		89743	EXHAUST TUBE	1	
22		66350	SEAL, EXHAUST TUBE - LOWER	1	
23		86027	SEAL, EXHAUST TUBE - UPPER	1	
24	32	67295	TUBE, WATER (LONG)	1	
24	32	74729	TUBE, WATER (X-LONG)	1	
25	27	99173 1	GASKET, DRIVE SHAFT HOUSING	1	2
26		41945A 7	PLATE ASSEMBLY, DRIVE SHAF	1	
27		18398 2	SEAL BRACKET	1	
28		68011	BRACKET, SEAL RETAINING	1	
29	10	48408	SCREW, BRACKET TO PLATE (12	
30	17	20033	DOWEL PIN, LOCATING	2	
31	26	38970	SEAL, WATER TUBE	1	2
32	10	90192	SCREW, EXTENSION TO PLATI	6	
33	27	99177 1	GASKET	1	DRIVE SHAFT HOUSING PLATE 2
34	12	25970	WASHER, POWER HEAD STUD	4	
35	11	6825A	NUT, POWER HEAD STUD	4	