



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		12430A	1 SENSOR ASSEMBLY	1		
2	10	48409	SCREW, SENSOR ATTACHING	1	(5/8")	
3		41470A15	WARNING MODULE ASSEMBLY	1		
4	12	38833	WASHER, WARNING MODULE S	3		
5	10	69020	SCREW, WARNING MODULE TO	3	(7/8")	
6		41032	OIL PUMP	1		
7	10	32228	SCREW, OIL PUMP TO CRANKCA	1	(5/8")	
7	10	41507	SCREW, OIL PUMP TO CRANKCA	1	(1-1/8")	
8		19385	6 LINK, THROTTLE LEVER TO OIL	1		
9	23	41429A	1 BEARING ASSEMBLY, DRIVE GE	1		
10	43	12726	DRIVEN GEAR	1		
11	32	43016	19 TUBING, OIL PUMP TO TEE	1		
12	10	42813	SCREW, WARNING MODULE LE/	1		
13	25	11379	"O" RING, OIL PUMP	1		
14	1257	8742	1 OIL TANK	1		
15	36	43298A	2 CAP ASSEMBLY, OIL TANK	1		
16	25	11332	"O" RING, CAP	1		
17		43295A	5 ADAPTOR HOUSING ASSEMBLY	1		
18	25	11332	"O" RING, ADAPTOR HOUSING	1		
19	32	99802	TUBE, OIL PICK-UP	1		
20			QUICK DISCONNECT KIT	1	(Kit - NLA)(Order parts separately)	
21	32	99439	HOSE, OIL	1		
22		12540A	3 HOUSING	1		
23		12242A	1 LATCH	1		
24	21	43278	FITTING, CHECK VALVE (CRANKI	1		
25		99443	OIL RESERVOIR	1		
26	10	69020	SCREW, OIL RESERVOIR ATTAC	3	(7/8")	
27	12	42118	WASHER, OIL RESERVOIR SCRE	6		
28	25	42117	GROMMET, OIL RESERVOIR SCF	3		
29	23	42116	BUSHING, OIL RESERVOIR SCRE	3		
30	32	43017	36 TUBING, OIL RESERVOIR TO OIL	1		
31	36	43300A	1 CAP ASSEMBLY, OIL RESERVOIF	1		
32	27	43307	GASKET, RESERVOIR CAP	1		
33		99022A	1 FLOAT ASSEMBLY	1		
34	11	99265	PUSHNUT	1		
35	54	41582	1 CLAMP, OIL HOSE (SMALL)	2		
36	54	41582	3 CLAMP, OIL HOSE (LARGE)	2		
37	32	99127109	TUBING, OIL	1		
38	22	42425	FITTING, OIL TUBING	1		
39	32	90729	25 HOSE, OIL (6-3/4")	1		
40	32	99127109	HOSE	1		