



18956

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
0	1647	9148A18	GEAR HOUSING	1	(LONG)(BLACK)	
0	1647	9148A19	GEAR HOUSING	1	(X-LONG)(BLACK)	
0	1647	9148A20	GEAR HOUSING	1	(LONG)(GRAY)	
0	1647	9148A21	GEAR HOUSING	1	(X-LONG)(GRAY)	
1	1647	9148A11	GEAR HOUSING ASSEMBLY	1	(BASIC)(BLACK)	
1	1647	9148A12	GEAR HOUSING ASSEMBLY	1	(BASIC)(GRAY)	
2	22	85822A	CONNECTOR ASSEMBLY	1		
3	17	20033	PIN, Dowel	2		
4	16	78638	STUD, (.438 x 3.12)	1	(LONG)	
4	16	18978	STUD, (.438 x 3.69)	1	(X-LONG)	
5	16	57920	STUD, (.44 x 2.06)	2		
6	16	56297	STUD, (.312 x 3.38)	1		
7	16	30667	STUD, (.250-20/250-28 x 3.12)	2		
8	31	42647A	BEARING ASSEMBLY, Roller	1		
9	23	43998	SLEEVE	1		
11	45	44000	DRIVESHAFT	1	(LONG)	
11	45	44209	DRIVESHAFT	1	(X-LONG)	
12		NSS	NOT SOLD SEPARATE	1	(Part of 43-44102A2)	
13	12	92721	WASHER	1		
14	11	35921	NUT, (.625-18)	1		
15	15	42637A	SHIM SET	AR		
16	31	36387A	BEARING, Roller	1		
17	11	42633	NUT	1		
18	46	42579A	WATER PUMP BASE ASSEMBLY	1		16
19	27	42631	GASKET	1		2,16,17
20	25	90011	O-RING, (2.175 x .175)	1		2,16,17
21	26	89238	OIL SEAL	1		16,17
22	26	16977	OIL SEAL	1		16,17
23	27	85608	GASKET, LOWER	1		2,16,17
24	27	85609	GASKET, UPPER	1		2,16,17
25		32435	FACE PLATE	1		16
26	46	96148A	WATER PUMP BODY ASSEMBLY	1		16
27		48752	INSERT	1		16
28	26	38970	SEAL, RUBBER	1		2,3,16,17
29	47	89984	IMPELLER	1		16
30	28	56654	KEY	1		16
31	10	96411	SCREW, (#14-8 x 2.25)	1		
32	12	29245	WASHER, (.281 x .500 x .060)	2		
33	11	13438	NUT, (.250-28)	2		
34	12	36001	WASHER	1		
35	11	13438	NUT	1		