



18971

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		12430A 4	SENSOR ASSEMBLY	1	
2	10	48409	SCREW, (#10-16 x .625)	1	
3		41470A11	WARNING MODULE ASSEMBLY	1	
4	12	38833	WASHER	3	
5	10	69020	SCREW, (#10-32 x .875)	3	
6		815698	OIL PUMP	1	
7	10	32228	SCREW, (#10-32 x .625)	1	
7	10	41507	SCREW, (#10-32 x 1.120)	1	
8		19385 6	LINK	1	
9	23	41429A 2	BEARING ASSEMBLY	1	
10	43	12726	DRIVEN GEAR	1	
11	32	43016 25	TUBING, (8.00 Inch)	1	
12	25	11379	O-RING	1	2
13	10	42813	SCREW	1	
14	1257	8742 1	TANK	1	
15	36	43298A 2	CAP ASSEMBLY	1	
16	25	11332	O-RING	1	
17		43295A 5	ADAPTOR HOUSING ASSEMBLY	1	
18	25	11332	O-RING	1	
19	32	99802	TUBE	1	
20		NLA	No Longer Available, Quick Discon	1	
21	32	99439	HOSE, (114.00 Inches)	1	
22		12540A 3	HOUSING	1	
23		12242A 1	LATCH	1	
24		99443 3	OIL RESERVOIR	1	
25	10	69020	SCREW, (#10-32 x .875)	3	
26	12	42118	WASHER	6	
27	25	42117	GROMMET	3	
28	23	42116	BUSHING	3	
29	32	43017 36	TUBING	1	
30	36	43300A 9	CAP ASSEMBLY	1	
31	27	43307	GASKET	1	
32		99022A 1	FLOAT ASSEMBLY	1	
33	11	99265	PUSHNUT	1	
34	54	41582 1	CLAMP (SMALL)	2	
35	54	41582 3	CLAMP (LARGE)	2	
36	32	99127109	FUEL LINE, (57.00 Inches Bulk)	1	
37	22	42425	TEE	1	
38	32	90729 25	HOSE	1	
39	32	99127109	FUEL LINE, (57.00 Inches Bulk)	1	
40	21	43278	FITTING (CRANKCASE)	1	