



12005

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		14856A14	DETONATION CONTROLLER ASSEMBLY	1	(200)	
2	10	88447	SCREW, (.190-32 x 1.62), Detonati	3	(200)	
3	12	38833	WASHER, Detonation Controller Sc	3	(200)	
4		13381	PLATE	1	(200)	
5	84	60466A20	CABLE ASSEMBLY	1	(200)	
6	10	62568	SCREW, (#10-16 x .375), Cable To	1	(200)	
7	23	94304	SPACER	3	(200)	
8		41470A25	OIL INJECTION WARNING MODU	1		
9		14851	INDICATOR, Throttle Position	1		
10	10	15150	SCREW, Indicator	2		
11	13	26995	LOCKWASHER, (#8), Indicator Scr	2		
12	12	30164	WASHER, (.192 x .375 x .0312), In	2		
13	23	15885	SLEEVE	1		
14		13221A 1	TEMPERATURE SENSOR ASSEMBLY	1		
15	25	45711	O-RING, (.612 x .103)	1		2
16	10	57583	SCREW, (#8-32 x .375)	3		
17	13	26995	LOCKWASHER, (#8)	3		
18	10	42813	SCREW	1		
19		813501	PLATE	2		
-	27	815791A92	ENGINE GASKET SET	1		